



MICOM ELECTRIC DISPENSING POT OPERATING INSTRUCTIONS

CD-FAC22

ZUTTO



INDEX

IMPORTANT SAFEGUARDS.....	1
PRECAUTIONS.....	3
NOUS INDIQUONS LES MESURES DE PRÉCAUTIONS SUIVANTES.....	5
PARTS NAMES.....	6
HOW TO USE.....	7
CLEANING AND MAINTENANCE.....	13
TROUBLESHOOTING GUIDE.....	15
SPECIFICATIONS.....	17
REPLACEMENT PARTS.....	17

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs. Do not close or clog the Steam vent opening under any circumstances.
3. To protect against fire, electric shock and other injury to persons, do not immerse cord, plugs or the appliance in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or other injury to persons.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of tables or counters, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot liquids.
12. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. To protect against electrical hazards, unplug the cord at all times before cleaning.
15. Scalding may occur if the lid is removed during the boiling cycles.

"This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way".

SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

- A. A short detachable power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- B. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- C. If a long detachable power-supply cord or extension cord is used, (1) the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance, (2) if the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and (3) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

IMPORTANTES MESURES DE SÉCURITÉ

Pour utiliser des appareils électriques, il faudrait toujours prendre les précautions de base, y compris les suivantes.

1. Lisez toutes les instructions.
2. Ne touchez pas les surfaces qui peuvent être chaudes. Utilisez les poignées ou les boutons.
3. Pour éviter les chocs électriques, ne plongez pas le cordon, la fiche ou l'appareil portable dans l'eau ou un autre liquide.
4. Surveillez bien les enfants s'ils utilisent un appareil ou s'ils se trouvent à proximité d'un appareil en marche.
5. Appareils portatifs. Débranchez l'appareil de la prise de courant quand vous ne l'utilisez pas avant d'enlever ou d'installer des pièces et avant de le nettoyer. Laissez l'appareil refroidir avant de le manipuler.
Appareils branchés à demeure. Assurez-vous que l'appareil est ARRÊTÉ quand vous ne l'utilisez pas avant d'enlever ou d'installer des pièces et avant de le nettoyer.
6. Appareils portatifs. Ne faites pas fonctionner l'appareil si le cordon ou la fiche sont endommagés, si l'appareil ne fonctionne pas correctement, s'il est tombé ou s'il a été endommagé. Confiez au service de réparation recommandé le plus proche tout examen, réparation ou réglage électrique ou mécanique de l'appareil.
7. L'utilisation d'accessoires non recommandés par le fabricant de l'appareil peut causer des blessures.
8. N'utilisez pas l'appareil à l'extérieur.
9. Ne laissez pas le cordon pendre par-dessus le bord d'une table ou d'un comptoir et assurez-vous que le cordon n'est pas en contact avec des surfaces chaudes.
10. Ne placez pas l'appareil près d'un brûleur à gaz allumé ou d'un élément électrique ou tension ou dans un four allumé.
11. Soyez très prudent en déplaçant un appareil qui contient du liquide chaud.
12. Le cas échéant, branchez toujours la fiche à l'appareil et assurez-vous que l'interrupteur de celui-ci est à la position ARRÊT (OFF) avant de brancher la fiche dans la prise. Pour débrancher l'appareil, placez l'interrupteur à ARRÊT (OFF) puis retirez la fiche de la prise de courant.
13. N'utilisez l'appareil que pour la fonction à laquelle il est destiné.
14. Pour vous protéger contre une secousse électrique, pensez à débrancher l'appareil avant tout nettoyage.

CONSERVEZ CES INSTRUCTIONS

CET APPAREIL EST RÉSERVÉ A L'USAGE DOMESTIQUE.

PRECAUTIONS

Before use

These WARNINGS and CAUTIONS are intended to protect you and others from personal injury and household damage. To ensure safe operation, please follow carefully.

WARNINGS

Do not modify the product. Only a repair technician may disassemble or repair this unit.

- Attempting to do so may cause fire, electric shock or injury. Make any repair inquiries to Zojirushi Customer Service.

Do not immerse the product in water or splash it with water, and do not put it on a wet surface such as a sink.

- Doing so may cause short circuit or electric shock.

Do not plug or unplug the Power Cord if your hands are wet.

- Doing so may cause electric shock or injury.

Do not touch the Steam Vent or near your face it.

- Doing so may cause burns or scalding. Take special precautions with children and infants.

Do not cover the Steam Vent with anything such as a dishcloth.

- Hot water may spill out, resulting in scalds.

Do not allow children to use the product unsupervised. Keep it out of the reach of infants.

- Children are at risk of burns, electric shock or injury.

Do not fill over the Maximum Water Level Line.

- Overfilling may cause hot water to spill out, resulting in scalds.

Always remove the Upper Lid before disposing hot water.

- The Upper Lid may fall off and cause hot water to splash, resulting in scalds.

Do not tilt or shake the product or carry in your arms. Do not move it or drain hot water by holding the Upper Lid.

- This may result in scalding by hot water spilling out from the Spout or Steam Vent, even if the DISPENSE auto-lock is on. Always use the handle when carrying.

Do not tilt the product or tip it over.

- Hot water may spill from the Spout or Steam Vent, even if the DISPENSE auto-lock is on.

Do not slam the Upper Lid when closing.

- Hot water may dispense or spill out, resulting in scalds.

Do not use the product if the Power Plug or Power Cord is damaged or if the Power Plug is loosely inserted into the electrical outlet.

- Doing so may cause electric shock, short circuit or fire.

Close the Upper Lid securely.

- Hot water may spill out when the product is overturned, resulting in scalds.

Do not damage the Power Cord. Do not bend, pull, twist, fold, or attempt to modify the Power Cord. Do not place it on or near high temperature surfaces or appliances, under heavy items or between objects.

- A damaged Power Cord can cause fire or electric shock.

Do not use the product as a cooler or place ice inside of it.

- This may cause condensation, resulting in electric shock or breakdown of the product.

Do not allow the prongs of the Appliance Plug to become soiled with dust or come into contact with any metal objects.

- This may cause electric shock, short circuit or fire.

Do not allow infants or children to put the Appliance Plug in their mouth.

- Doing so may cause electric shock or injury. Take special precautions with children and infants.

Insert the Power Plug completely and securely into the electrical outlet.

- A loosely inserted Power Plug may cause electric shock, short circuit, smoke or fire.

Use only an electrical outlet rated at 15 amperes minimum, and do not plug other devices into the same outlet.

- Plugging other devices into the same outlet may cause the electrical outlet to overheat, resulting in fire.

If the blades or surface of the Power Plug become soiled, wipe them clean.

- A dirty Power Plug may cause fire.

Do not use a power source other than 120V AC.

- Use of any other power supply voltage may cause fire or electric shock.

Do not boil anything other than water.

- Attempting to boil, cook, or heat up the following items may cause bubbling or boiling over, which may cause scalding. This may also cause clogging of the water route, corrosion of the Inner Container, or peeling of the Nonstick Coating.

- Milk, sake, soup, charcoal, tea bags or tea leaves.
- Instant food.
- Food and sauce pouches or foods in plastic bags.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Stop using immediately if you notice any of the following symptoms indicating a malfunction or breakdown.

- Continued use of the product may cause smoke, fire electric shocks or injury.
 - The Power Plug or Power Cord has become very hot.
 - The Power Cord is damaged or the electricity turns on and off when touched.
 - The Body is deformed or unusually hot.
 - Smoke is arising from the product or there is a burning smell.
 - Some part of the product is cracked, loose or unstable.
 - The product emits steam for at least 10 minutes continuously and does not turn to Keep Warm mode.
- If any of the above occurs, unplug the product immediately and return to the store where you purchased it for check-ups and/or repairs.**

CAUTIONS

Always use caution when opening the Upper Lid and avoid skin contact with steam.

- Loose water or steam may escape upon opening the Upper Lid and cause scalds.

Do not touch hot surfaces during or immediately after use.

- Touching hot surfaces may cause burns. Be especially careful with metal parts such as the Lid and the Inner Container.

Do not hold or carry the product by the Lid Lock.

- Doing so may cause injuries or scalds.

Do not use the product near walls, furniture or beneath shelving.

- Steam or heat may damage, discolor or deform walls, furniture or shelving.

Do not swivel or move the product while dispensing water.

- Hot water may splash out, resulting in scalds.

Do not place or use the product on unstable surfaces or on surfaces that are vulnerable to heat.

- Doing so may cause fire.

Do not attempt to dispense hot water while it is boiling.

- Hot water can spurt out, resulting in scalds.

Do not use other Power Cords than the one provided. Do not use the Power Cord for other appliances.

- Do not use the Power Cord for Overseas Models.
- Doing so may cause malfunction or fire.

Unplug the Power Plug from the outlet when the product is not in use.

- Leaving the Power Plug in an outlet may cause the insulation to become damaged, resulting in electric shock, short circuit or fire.

Please allow the product to cool down before cleaning.

- Touching hot surfaces may cause burns.

Always unplug the product by holding the Power Plug, not by pulling the Power Cord.

- Pulling the Power Cord to unplug the product may cause electric shock, short circuit or fire.

Replace the Inner Lid Gasket if it becomes discolored white.

- Hot water may spill out when the product is tilted or tipped over accidentally, and may cause scalding.

If the Power Cord is damaged, it must be replaced by an appropriate cord or assembly made available by the manufacturer or its service agent.

IMPORTANT

Do not operate the product when it is empty.

- This may burn or damage the product.

Avoid rough handling, dropping or bumping the product.

- This may cause damage or cease operation of the product.

Avoid letting steam make contact with cabinets and walls when using near or under a kitchen shelf.

- This may cause discoloration or deformation.

Do not use the product near a heat source or on top of induction heating cookers.

- This may cause fire, breakdown or damage of the product.

Allow the product to dry completely when storing the product in an area where it may freeze for a long period of time.

- If water left inside freeze, it may cause breakdown or malfunction.

Do not allow hot water to make contact with the Control Panel.

- Doing so may cause breakdown of the product.

Do not drag the product over any surface while attempting to move.

- This may cause damage to surfaces such as countertops.

Avoid using the product near a radio, TV, computer, etc.

- The product may cause interference with certain electronics.

Do not use the product where its steam may come into contact with other electrical appliances.

- The steam may cause fire, malfunction, discoloration or deformation to other electrical appliances.

NOUS INDIQUONS LES MESURES DE PRÉCAUTIONS SUIVANTES


- **Ne pas modifier l'appareil. Le faire réparer par un technicien qualifié.**
- **Conserver l'appareil et le cordon hors de la portée des enfants. Ne pas laisser les enfants toucher la prise magnétique à cause des risques de chocs électriques.**
- **Conserver l'appareil hors de la portée des enfants. Ne pas laisser les enfants utiliser l'appareil sans la présence d'un adulte.**
- **Ne pas tremper l'appareil dans de l'eau et ne pas l'asperger. Ne pas poser l'appareil sur une surface mouillée telle qu'un évier de cuisine.**
- **Remplir le récipient d'eau de manière à ne pas dépasser la ligne indiquant le niveau d'eau.**
- **Ne pas forcer le couvercle du haut pour le fermer.**
- **Eviter d'incliner ou de renverser l'appareil.**
- **Ne pas le transporter dans vos bras ni l'incliner ou encore le secouer. Ne pas le déplacer ou verser de l'eau chaude en le tenant pas le couvercle.**
- **Ne pas placer de tissu ou tout autre objet sur l'orifice d'échappement de la vapeur.**
- **Essuyer la prise électrique ou les fiches si elles sont souillées.**
- **Ne pas utiliser l'appareil si la prise ou le cordon électrique sont endommagés ou encore si la prise n'est pas adaptée à la prise murale.**
- **N'utiliser qu'un courant électrique AC de 120 volts.**
- **Ne pas gratter, endommager, modifier, tordre de force, tirer ou plier le cordon d'alimentation. Ne pas placer d'objets lourds sur le cordon d'alimentation et ne pas le coincer ou tenter de le modifier.**
- **Ne pas laisser des épingles ou tout autre objet en métal en contact avec la prise.**
- **Pour débrancher le cordon d'alimentation, le saisir toujours pas la prise.**
- **Ne pas tirer directement sur le cordon d'alimentation.**
- **Ne pas tenter de verser dans l'appareil de l'eau en ébullition ou qui vient juste de bouillir.**
- **Ne pas placer l'appareil sur une surface instable ou dans un endroit sensible à la chaleur.**
- **Lorsque le pot électrique est utilisé en régions montagneuses, il n'existe pas de mode « Conservation de la température » et l'eau continue de bouillir.**
- **Débrancher l'appareil lorsqu'il n'est pas utilisé.**
- **Ne pas toucher l'orifice d'échappement de la vapeur pour éviter les brûlures.**
- **Eviter de laisser la peau en contact avec la vapeur en ouvrant le couvercle du haut.**
- **Utiliser un courant de 15 ampères ou plus.**

PARTS NAMES

Control Panel

Display (LCD)



The present water temperature and temperature setting are indicated on the Display.

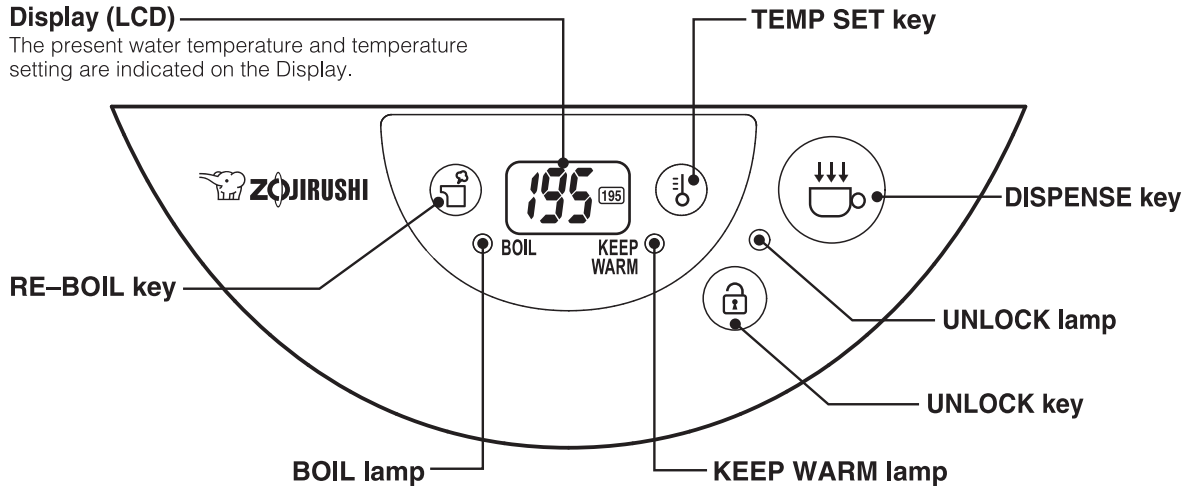

• The tactile dot beside the DISPENSE key is a help for handicapped persons.

Inner Lid Gasket

Hot water may leak from the gap between the Upper Lid and the Body when tilted if the Inner Lid Gasket becomes old and turns white. This may result in scalds.

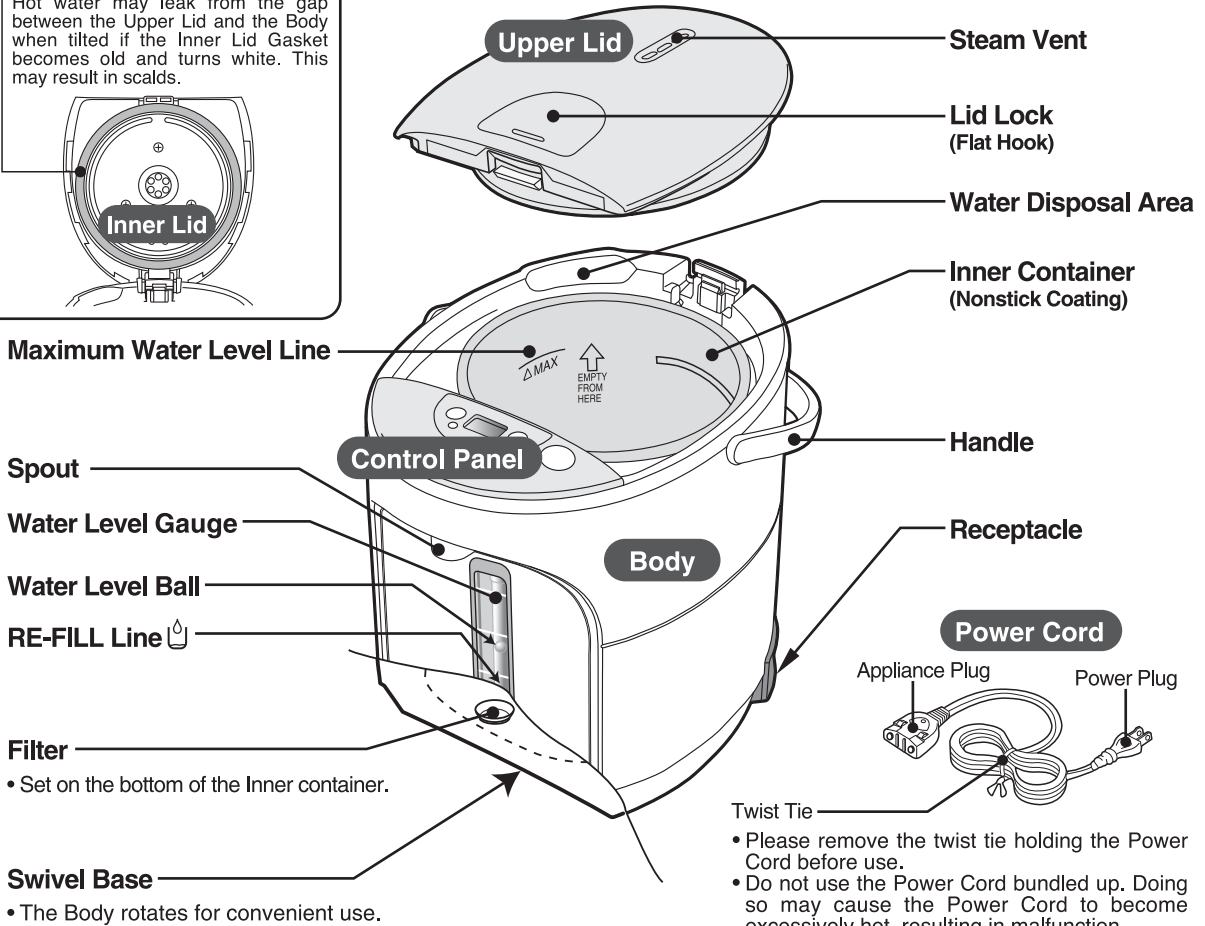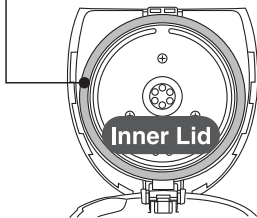


• Set on the bottom of the Inner container.

• The Body rotates for convenient use.

• Please remove the twist tie holding the Power Cord before use.
 • Do not use the Power Cord bundled up. Doing so may cause the Power Cord to become excessively hot, resulting in malfunction.

HOW TO USE


1. Open the Upper Lid and fill with water.

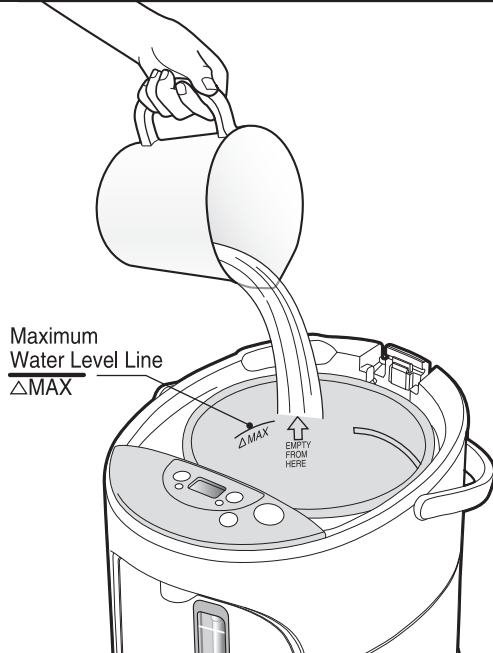

- Do not fill the Inner Container directly from the tap. Use another container.
(Overflowing water could cause a short circuit or electric shock.)
- Do not fill over the Maximum Water Level Line.
(Hot water may overflow, causing scalding.)
- Be careful not to splash water on the Body or the Control Panel.
(It can damage the Dispenser and cause an electric shock.)
- Ensure that the Filter is in place.

* Adding hot water could activate the Automatic Shut-Off function.
(See P.10 "Automatic Shut-Off" function.)

- The thickness of the stripes of the Water Level Gauge changes depending on water volume.

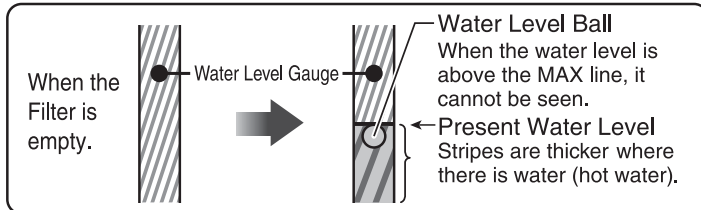


To open the Upper Lid

Push down on the front of the Lid Lock (Flat Hook) and pull it up to open the Upper Lid.


To close

Securely close the Upper Lid till you hear a "click" sound.

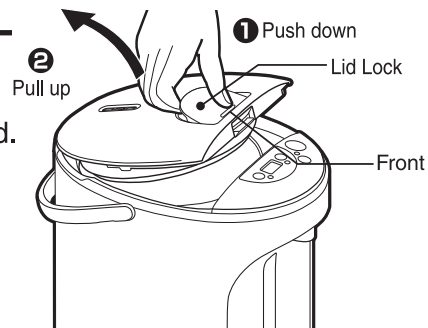


To detach the Upper Lid

Open the Upper Lid to an angle of about 45 degrees. While pressing and holding the Upper Lid Detach Button, detach the Upper Lid by pulling it forward and up at an angle.

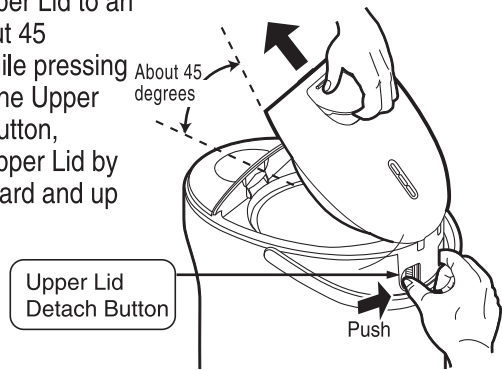

To attach

Push the Upper Lid back into place at the same angle till you hear a "click" sound.

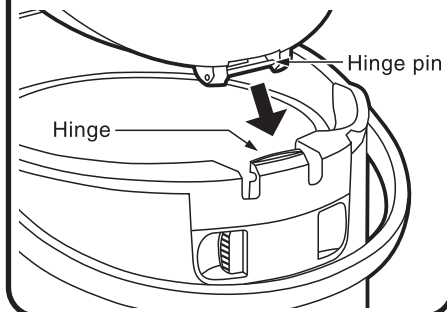


- When you open or close the Upper Lid, a small rattle noise can be heard. This is not a malfunction.
(See P.15 "TROUBLESHOOTING GUIDE".)

Before using your Dispenser for the first time or after not using it for a long time, boil and discard one full pot of water by unlocking it and pressing the DISPENSE key. The first time you use the Dispenser you may notice the smell of plastic. This is normal and will fade away gradually.


2. Boil mode (Automatic Steam Blocking) → Keep Warm mode (at 195°F)

The Dispenser will automatically start to heat the water when you plug it in.

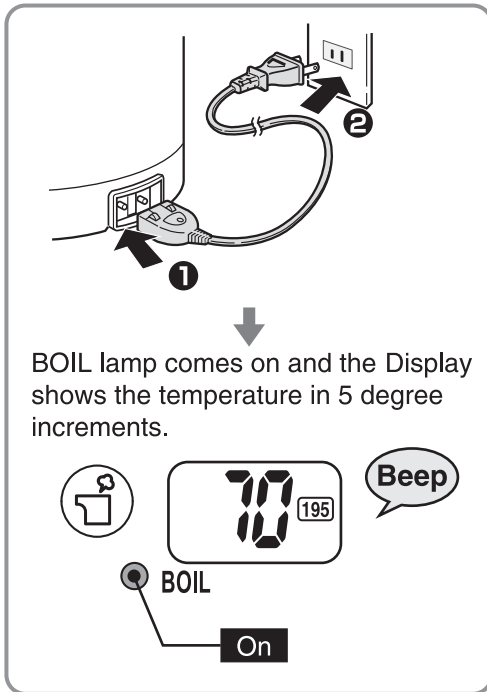

When boiling is complete → Keep Warm

(BOIL lamp goes off, and the KEEP WARM lamp comes on following the beep.)

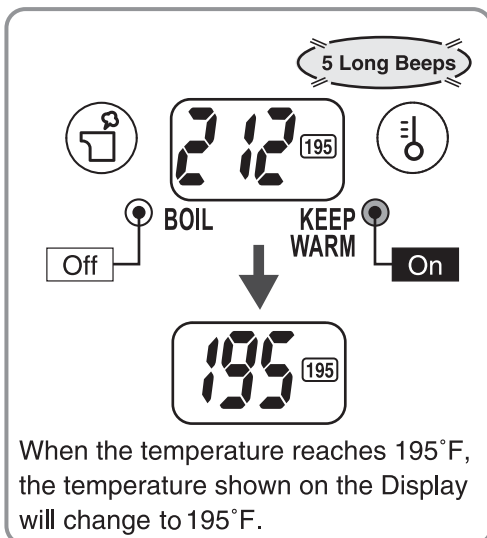

Keep Warm mode at 195°F

Setting at this mode saves electricity* during Keep Warm compared to Keep Warm at 208°F.

* The Dispenser is set to boil and re-boil twice a day, for a 24-hour day and 365 days a year.

Automatic Steam Blocking

This function blocks steam while water is boiling so that walls and furniture are not affected.

* The steam blocking function may not activate if the water level is low or is re-boiling.

Cautions

- Do not open the Upper Lid when the BOIL lamp is on.
- Do not dispense hot water while it is boiling.
- Do not place a cloth over the Steam Vent.
- Be careful of steam coming out from the Steam Vent. (It may scald you.)

Time required to boil water

Approx. 22 minutes

(At a room temperature of 68°F with the dispenser filled to the Maximum Water Level Line with water temperature of 68°F.)

* It includes approx. 3 minutes to De-Chlorinate.

Pour more water when the water level is low while the Keep Warm mode is on. (The Dispenser will automatically start to heat up the water.)


If the water level is still not high enough, the Dispenser will not switch to Boil. In this case, press the RE-BOIL key.

- * Be careful not to scald yourself by steam when opening the lid to add water.
- * Do not slam down the Upper Lid. (Hot water may spill out, resulting in scalds.)

HOW TO USE (CONT.)


3. Dispense hot water.

 Press the  key.

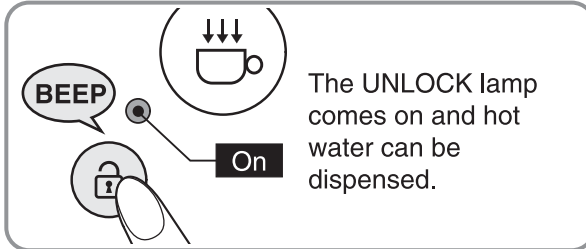

- Do not swivel the Dispenser while dispensing water. (Hot water may splash out, resulting in scalds.)
- When turning the Dispenser, be careful that the Power Cord does not coil around the Body. (Dispenser could fall.)
- Do not unlock and press the DISPENSE key if the Inner Container is empty. (Could cause damage.)

 Press the  key to dispense hot water.

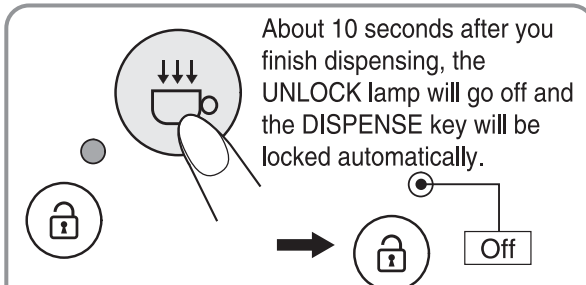

- * When the UNLOCK lamp is off, water cannot be dispensed.
- * The first cup of water may not be very hot.
- * Water may not dispense smoothly immediately after boiling.
- * Be careful as the Body heats up during the Boil and Keep Warm mode.


DISPENSE key auto-lock

A safety function to prevent hot water from dispensing if the DISPENSE key is accidentally pressed.

* Even if no water is dispensed, the DISPENSE key auto-lock will be switched on after about 10 seconds.

4. Dispose water.

- ① Unplug the Power Plug and detach the Upper Lid.
- ② Hold the Dispenser with both hands as shown in the drawing below. (Hold it securely so that it will not slip out of your hands.)
- ③ Dispose water from the Water Disposal Area of the Inner Container.

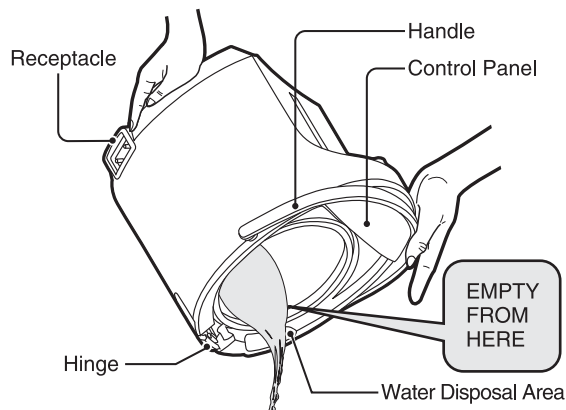


- Do not plug or unplug the Power Plug or Appliance Plug with a wet hand. (Doing so may cause an electrical shock or injury.)
- Do not dispose hot water with the Upper Lid in place. (Hot water may spill out when the Upper Lid is removed, resulting in scalds.)
- Do not allow water to splash on the Control Panel, Hinge, Handle or Receptacle. (Could cause scalding or the unit to breakdown.)
- Handle carefully so that dripping water does not splash on your hands etc. (Could cause scalding.)
- Dispose the water at least once a day. (Leaving water in the Inner Container can accumulate scale.)
- Dispose the water carefully only from the Water Disposal Area of the Dispenser.


* Please do not lose the Filter.

Cancel the beep setting

Beeps sound when the water completes boiling. The default setting beeps 5 times. If you want to cancel this setting, follow the procedures below.

Hold the  key for more than 3 seconds while boiling or in the Keep Warm mode. A beep sounds indicating that the setting has been cancelled.


- * Although the beep setting has been cancelled, each key operation beeps will still sound.
- * If the unit is unplugged for a long time, the beep returns to the default setting.

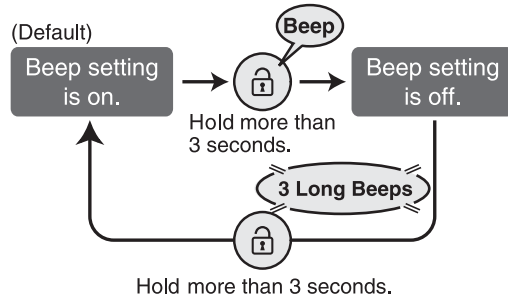

Re-Boil mode

This function is used when re-boiling water during Keep Warm mode.

 Press the  key.

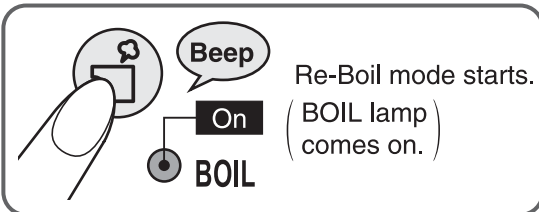

When re-boils is complete → Keep Warm
(BOIL lamp goes off, and the KEEP WARM lamp comes on following the beep.)

• Time required to finish re-boiling

Keep Warm at 208°F	Keep Warm at 195°F
Approx. 2 minutes	Approx. 4 minutes

(At a room temperature of 68°F with the Dispenser filled to the Maximum Water Level line.)


- * Steam blocking may not activate when re-boiling.
- * Make sure the water level is above the RE-FILL Line before pressing the RE-BOIL key.
- * Do not dispense the water until the Keep Warm lamp is on. The water may not dispense smoothly.

Automatic Shut-Off function

The Automatic Shut-Off function shuts down electricity to the heater in order to prevent malfunction from overheating. The Display will show the following to advise you that the unit has been automatically shut off.

- Causes**
- When plugged in without filling in water.
 - When the water level is lower than the RE-FILL Line but it has been attempted to boil.
 - The Dispenser is empty or the Upper Lid is left open for adding water.
 - When pouring in hot water immediately after plugging the unit in.


Remedy Allow the Inner Container to cool down. Fill the Inner Container with water and then plug it in.

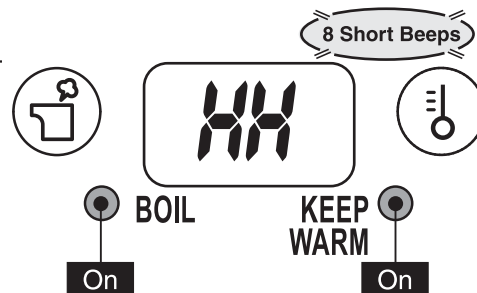


Continued repetition of overheating or empty-boiling may cause discoloration or peeling of the Nonstick Coating.

HOW TO USE (CONT.)

Change the Keep Warm temperature setting

Press the  key to select the desired temperature setting.

Each press changes the setting on the Display.

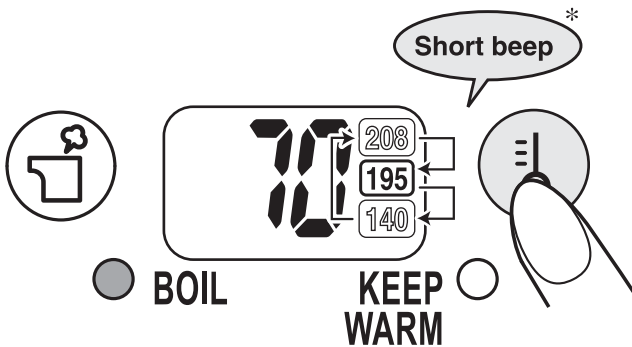

* When you set the Keep Warm at 195°F, a long beep sounds.


- The default Keep Warm setting is 195°F.
- The Keep Warm temperature can be changed during the Keep Warm mode.

(The mode may switch to the Re-boiling mode depending on the hot water temperature.)

Keep Warm at 208°F

The temperature of 208°F is ideal for making coffee, tea or cup noodles.

When the water had boiled, the BOIL lamp turns off and the KEEP WARM lamp comes on following the beep.

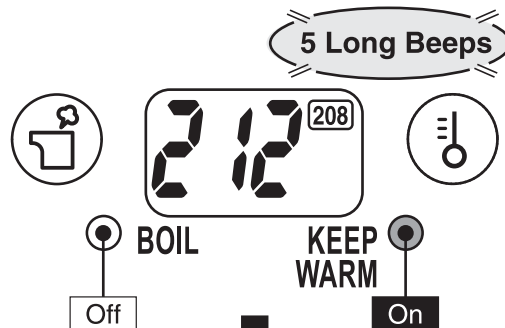

When the water temperature reaches 208°F, the Display will show "208".




* Depending on the air pressure conditions, the Keep Warm mode may be set at 205 - 207°F, in order to prevent continuous boiling.

Keep Warm at 140°F

When the water has boiled, the **BOIL** lamp goes off and **KEEP WARM** lamp blinks following the beeps.

(When you change it to 140°F during Keep Warm, the blinking begins after 2 seconds.)

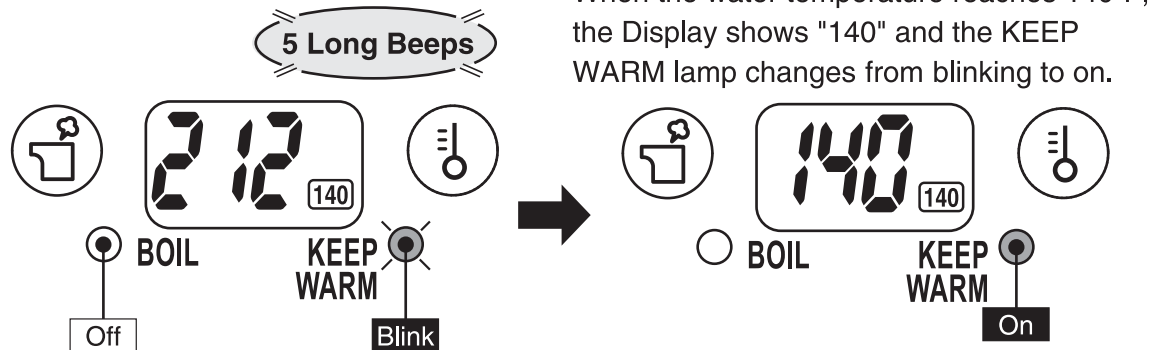

Times required to reach 140°F	
2.2 L	Approx. 4 hours
1 L	Approx. 2 hours 30 minutes

(At a room temperature of 68°F)

- * These times may vary depending on the amount of water in the Inner Container and the room temperature.
- * To lower the water temperature quickly, reduce the amount of hot water in the Inner Container.
- * If you add water while the water temperature is decreasing, the water may not come to a boil.

- If the Dispenser is accidentally unplugged during Keep Warm, the setting will return to Keep Warm at 195°F when it is plugged in again. If the Keep Warm temperature before unplugging was at 140°F, re-boil mode starts automatically. If you want to cancel re-boiling, follow the procedures on the right.

① Press the  key to set Keep Warm to "140".

↓
② Press the  key.

- * If the water temperature lowered by adding cold water, it cannot be canceled.

- * To dechlorinate the water, bring to a boil first. If it is interrupted before it completes boiling, the dechlorinating process will not be completed.
- * Continued repetition of re-boiling and canceling with the RE-BOIL key could cause a malfunction.

CLEANING AND MAINTENANCE

Before cleaning the Dispenser, always disconnect the Power Plug from the electric outlet. Dispose the remaining water and allow the Body to cool down.

Any other services should be performed by an authorized service representative.

Inner Container


Do not drink the water used for citric acid cleaning.

Red rust-like spotting, milky white or black discoloration and filmy objects are caused by minerals in the water and not from discoloration or deterioration of the Inner Container itself. Although this is not a hygiene problem, clean the Inner Container periodically (every 1~3 months) with the citric acid Inner Container Cleaner for Electric Pots (CD-K03E-JU).

* The condition of the Inner Container depends on local water quality and how often you boil water.

To clean the Inner Container with citric acid

* If the Filter is dirty, remove it from the Inner Container and wash it with a brush, and then put it back.

- Put 1 pack of citric acid CD-K03E-JU in a cup and dissolve it in warm water.
- Fill the container with water and add the dissolved citric acid from ①.
- Plug in the Power Plug and hold the  key for more than 3 seconds.

<Cleaning>

<Completed>



Lamp and Display blinks simultaneously

Lamp and Display remain lit after the beep

* Do not fill over the Maximum Water Level Line. (Hot water may spill out, resulting in scalds.)
* If accidentally drank water while performing the citric acid cleaning, please follow the instructions shown on the package of the citric acid CD-K03E-JU.

• Time required for the cleaning varies depending on the size of the dispenser, room temperature and water temperature, etc.
• Repeated citric acid cleaning might be necessary for hard-to-remove residue.

To cancel the citric acid cleaning

Unplug the Power Plug for more than 5 seconds.

- Unplug the Power Plug and dispose the hot water.
- To remove the smell of citric acid, fill the Inner Container with water and bring it to a boil. Dispense about a cup of hot water, and dispose the rest.

If the citric acid is not available at your local store, please contact Zojirushi Customer Service at: 1-800-733-6270
CD-K03E-JU <Inner Container Cleaner for Electric Pots (30g×4 packs)>


Filter

Remove the Filter from the Inner Container and wash it with a brush.

If the deposits cannot be removed, replace the Filter. Note the model number and purchase it at the shop where you purchased the product.

* Never use the Dispenser without installing the Filter. (The Filter prevents foreign objects from entering the Electric Pump and obstructing the flow of hot water.)

Filter is installed at the bottom of the Inner Container. Pull on the Filter to detach it.

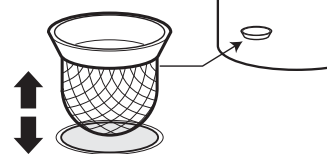

Firmly press the Filter to re-attach.

Upper Lid/ Body (exterior)	Wipe clean with a well-wrung damp cloth
Inner Lid	Wash it with a soft sponge, and rinse with water.
Power Cord	Wipe clean with a dry cloth.

Cautions

Please perform regular cleaning and maintenance.

- Using alkaline ionic water creates calcium accumulation on the Inner Container. Leaving these scale on the Inner Container or the Filter causes loud boiling noises or restrains water from dispensing.
- Although the Inner Container is Nonstick Coated, strong discoloration may occur if it is not cleaned for a long period of time.

Do not fill with anything except water.

Commercially available water, which may contain water improving materials such as charcoal and other minerals may cause malfunctions.

Never immerse the entire Dispenser in water or splash water on the Control Panel.

Never place the Dispenser upside down to dry when it is still wet.

(Doing so can cause damage or rust.)

Do not use the following items for cleaning.

- Detergent (the odor remains)
- Dishwasher or dryer (causes warping)
- Benzene, thinner (cause deterioration of resins)
- Cleanser, nylon or metal brush, metal spatula, etc. (scratches the Inner Container, Inner Lid, etc., or peels off the Nonstick Coating)

Changing the Inner Lid Gasket

The Inner Lid Gasket may need to be replaced due to time and wear. Check it about once a year.

Wipe new Inner Lid Gasket with a wet soft sponge before attaching to the Inner Lid.

To remove the Inner Lid Gasket

- 1) Loosen the 3 screws.
* Do not lose the screws.
- 2) Remove the Inner Lid Gasket.

When the Inner Lid Gasket takes on a white discoloration.


Please purchase and replace with a new one.

To attach the Inner Lid Gasket

- 1) Fit the Gasket of the Inner Lid securely to the outer circumference as shown in the figure.
- 2) Tighten the screws securely.



* When you detach the Inner Lid, make sure you plug the pin of the Upper Lid back into the installation hole of the Inner Lid and fit up the Inner and Upper Lid correctly.


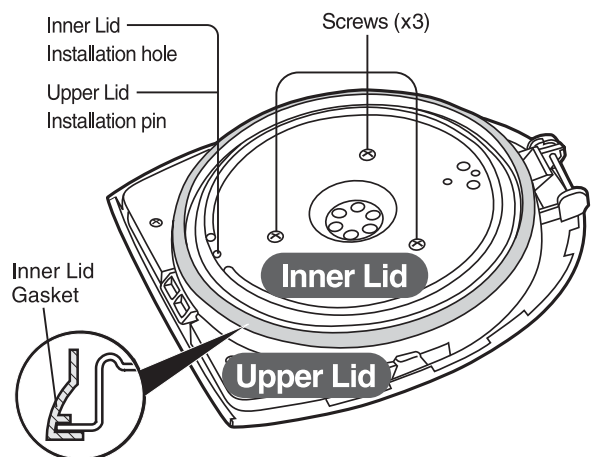
Hot water may leak from the gap between the Upper Lid and the Body when tilted if the Inner Lid Gasket becomes old and turns white. This may result in scalds.



TROUBLESHOOTING GUIDE

Check the following points listed below before calling for service. If you are experiencing a problem that is not listed below, note the model number and contact the shop you purchased this product or please call ZOJIRUSHI Customer Service at: 1-800-733-6270

Condition	Cause	Remedy
Water does not boil.	Power Plug is not connected to an electric outlet.	Connect the Power Plug.
	A metal object or dirt is on the tip of the Appliance Plug.	Disconnect the Power Plug and clean the Appliance Plug tip.
Water is not hot.	Initially upon dispensing or it has been a while after dispensing, the water may not be very hot. Please discard the first cup (of the hot water).	
Water does not dispense properly.	The DISPENSE key auto-lock is engaged.	Press the  key, then press the  key. (See P.9 "Dispense hot water".)
	Power Plug is not connected to an electric outlet.	Connect the Power Plug.
	A metal object or dirt is on the tip of the Appliance Plug.	Disconnect the Power Plug and clean the Appliance Plug tip.
	Substances such as scales have accumulated on the Inner Container and Filter.	Clean the Inner Container and the Filter. (See P.13 "CLEANING AND MAINTENANCE".)
	Hot water does not dispense properly a few minutes after boiling.	Open the Upper Lid once to release air bubbles, then close the Upper Lid. (Be careful of the steam when opening the Upper Lid.)
Water spills out by itself from Spout or Steam Vent.	Check that the pot is not filled over the Maximum Water Level Line.	Pour out the excess water until it is below the Maximum Water Level Line.
Red rust-like spottings appear on the Inner Container surface.	Caused by iron in the water, not a deterioration of the Inner Container.	Clean the Inner Container with citric acid. (See P.13 "CLEANING AND MAINTENANCE".)
Filmy objects are found in the Inner Container.	Residue is formed by the ingredients in water, not caused by corrosion of the Inner Container or peeling of the Nonstick Coating.	
Loud boiling sounds can be heard.	Excessive accumulation of substances such as scale on the Inner Container can cause loud boiling sounds.	

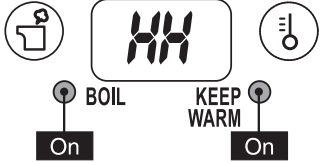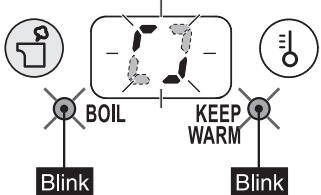Condition	Cause	Remedy
<p>The BOIL lamp, KEEP WARM lamp and Display simultaneously light up.</p> 	<p>The Inner Container is low on water or hot water was added to the Inner Container, causing the Automatic Shut-Off function to engage. (See P.10 "Automatic Shut-Off".)</p>	<p>Unplug the Power Plug and wait until the Inner Container cools down. Plug the Power Plug back in, add water and press the RE-BOIL key.</p>
<p>The BOIL lamp, KEEP WARM lamp and Display simultaneously blink.</p> 	<p>The Inner Container is in a citric acid cleaning cycle. (See P.13 "CLEANING AND MAINTENANCE".)</p>	<p>To cancel the citric acid cleaning cycle, unplug the Power Plug and wait for more than 5 seconds before plugging in again.</p>

Condition	Cause
<p>When you open/close the Upper Lid, a small rattle can be heard.</p>	<p>If the Dispenser accidentally fell over, the sound of the Water level ball can be heard. It prevents hot water from spilling. It is not a malfunction.</p>
<p>Hot water has a disagreeable odor.</p>	<p>The chlorine odor may be detectable in your tap water.</p> <p>A mild plastic odor may be noticed with a new Dispenser. This odor will fade away gradually.</p>
<p>The Body becomes hot.</p>	<p>When the water temperature and/or room temperature is high, the outer surface of the Body reaches about 140°F. This is not a malfunction.</p>
<p>The Power Cord becomes hot.</p>	<p>The Power Cord may become hot while the water is boiling. This is not a malfunction.</p>

Regarding the Upper Lid and Nonstick Coated Inner Container

The plastic parts of the Upper Lid may deteriorate over use. If discoloration shall occur or if the surface becomes rough, replace the Upper Lid.

The Nonstick coated Inner Container may damage over use.

* Contact the retail store where you purchased this product or call ZOJIRUSHI Customer Service at: 1-800-733-6270.

SPECIFICATIONS

Model No.		CD-FAC22
Capacity		2.2 L
Rating		AC 120V 60Hz
Electric Consumption		800W
Average Power Consumption during Keep Warm	208°F	Approx. 41 W
	195°F	Approx. 34 W
	140°F	Approx. 16 W
Power Cord		0.9 m (2.9 feet)
External Dimensions (inches)		Approx. 8.5 x 11.2 x 10 (W x D x H)
Weight (including the Power Cord Set)		Approx. 2.4 kg (5.29 Lbs)

- * The average Keep Warm electric power consumption is for one hour, provided that the Dispenser is full and the room temperature is approximately 68° F.
- * The height refers to the Dispenser when the handle is down.
- * The Dispenser may not perform as expected in high altitude or severely cold areas. Avoid using the product in such areas.

Replacement Parts

- Replacement parts may be available for an additional charge. Please replace damaged parts only with new parts.
- When replacing parts, please record the model number and part name beforehand. Then contact either the store where you purchased the dispenser or Zojirushi Customer Service.

Zojirushi Customer Service
1-800-733-6270
www.zojirushi.com

Part Name	Part Number
Inner Lid Gasket	625702-00
Filter	626251-00
Inner Container Cleaner for Electric Pots (30g × 4 packs)	CD-K03E-JU

Memo Please use as notations.

A large rectangular area with a dashed horizontal line for writing.



www.zojirushi.com

CD-FAC型 ©