



---

# *Gourmet d'Expert*<sup>®</sup> Electric Skillet

## OPERATING INSTRUCTIONS

---

# EP-PBC10

### INDEX

IMPORTANT SAFEGUARDS.....	2
PARTS NAMES.....	6
HOW TO USE.....	7
CLEANING AND MAINTENANCE.....	9
REPLACEMENT PARTS.....	9
RECIPES:	
SUKIYAKI.....	10
SHABU-SHABU.....	11
CORN RISOTTO.....	12
STEAK.....	13
TROUBLESHOOTING GUIDE.....	14
SPECIFICATIONS.....	14

# IMPORTANT SAFEGUARDS

Be sure to follow  
the instructions.

---

BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED WHEN USING ELECTRICAL APPLIANCES, INCLUDING THE FOLLOWING:

1. Read all instructions thoroughly.
2. This appliance is not intended for deep frying foods.
3. Avoid touching hot surfaces under any circumstances. The handles and knobs are provided for your safety and protection.
4. To prevent hazardous operation or electric shock, do not immerse power cord, power plug, or product (except pan and lid) in water or other liquids.
5. Close supervision is necessary when the appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Allow the appliance to cool before adding or removing parts, and before cleaning the appliance. Make sure appliance is OFF when not in use, before putting on or taking off parts, and before cleaning.
7. Do not use or operate the appliance with a damaged cord or plug. If the appliance malfunctions or has been damaged in any manner, unplug the appliance and return it to the nearest authorized service facility or dealer for examination, repair or adjustment.
8. The use of accessories or attachments not recommended by the appliance manufacturer may be hazardous or may cause injuries.
9. Do not use outdoors.
10. Keep the power cord away from hot surfaces and do not let the cord hang over the edge of tables or counters.
11. Do not place the appliance on or near a heated surface such as a gas or electric stove, or in a heated oven.
12. Always use extreme caution when moving appliances containing hot contents.
13. Always attach Plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to OFF, then remove plug from wall outlet.
14. Do not use the appliance for other than intended or specified purposes.
15. To reduce the risk of electric shock, use only the supplied pan.
16. The plug to the appliance should be attached first before plugging the cord into a wall outlet.
17. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
18. Children should be supervised to ensure that they do not play with the appliance.
19. This appliances are not intended to be operated by means of an external timer or separate remote-control system.
20. The heating element surface is subject to residual heat after use.

## SAVE THESE INSTRUCTIONS

---

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

This appliance is supplied with a short power cord to reduce the risk of becoming entangled in or tripping over. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the cord should be at least as great as the electrical rating of the appliance, and a longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug was designed to fit into a polarized outlet in only one direction. If the plug does not fit fully into the outlet, do not attempt to force it or modify it in any way. Simply reverse the plug and insert. If it still does not fit, contact a qualified electrician.

# IMPORTANTES MESURES DE SÉCURITÉ

---

LORS DE L'UTILISATION D'APPAREILS ÉLECTRIQUES, SUIVEZ LES PRÉCAUTIONS DE BASE SUIVANTES:

1. Lisez bien toutes les instructions.
2. Cet appareil n'est pas conçu pour la grande friture des aliments.
3. Ne touchez pas les surfaces qui peuvent être chaudes. Utilisez les poignées ou les boutons. N'obtenez en aucun cas l'orifice d'échappement de la vapeur.
4. Pour éviter les chocs électriques, n'immergez jamais le cordon électrique ou la prise, ou encore l'autocuiseur à riz (à l'exception de la marmite située à l'intérieur) dans l'eau ou dans tout autre liquide.
5. Soyez vigilants lorsque les enfants utilisent l'appareil ou se trouvent à proximité.
6. Débranchez l'appareil après usage ou avant de le nettoyer. Laissez l'appareil refroidir avant d'en retirer ou d'y insérer les accessoires et avant de le nettoyer. Assurez-vous que l'appareil est sur OFF lorsque vous ne vous en servez pas, avant d'en retirer ou d'y insérer les accessoires détachables ou encore avant de le nettoyer.
7. N'utilisez pas l'appareil avec une prise ou un cordon électrique endommagé. Ne vous servez pas d'un appareil qui pour une raison ou une autre fonctionne mal. Emportez l'appareil chez le réparateur ou le vendeur le plus proche en vue d'un contrôle ou d'une réparation.
8. L'utilisation d'accessoires ou de pièces non recommandés par le fabricant de l'appareil peut être dangereuse ou entraîner des blessures.
9. N'utilisez pas l'appareil à l'extérieur.
10. Ne laissez pas le cordon électrique pendre par-dessus le bord d'une table ou d'un comptoir et assurez-vous qu'il n'est pas en contact avec une surface chaude.
11. Ne placez pas l'appareil près d'une surface chaude telle qu'un brûleur à gaz allumé, une plaque électrique, un poêle ou encore dans un four en train de chauffer.
12. Soyez toujours très prudent lorsque vous déplacez l'appareil alors que son contenu est chaud.
13. Branchez toujours la fiche d'alimentation femelle dans l'appareil avant de brancher la fiche d'alimentation mâle dans une prise de courant. Pour débrancher l'appareil, mettez toutes ses commandes en position d'arrêt, puis débranchez la fiche d'alimentation mâle de la prise de courant.
14. N'utilisez pas l'appareil pour d'autres fonctions que celles auxquelles il est destiné.
15. Pour minimiser les risques de chocs électriques, n'utilisez que la marmite interne fournie avec l'appareil.
16. Veuillez d'abord relier le cordon d'alimentation à l'appareil avant de brancher la fiche dans une prise murale.
17. Cet appareil n'est pas conçu pour être utilisé par des personnes (y compris les enfants) ayant des capacités physiques, sensorielles ou mentales réduites, ou un manque d'expérience et de connaissances, à moins qu'une personne responsable de leur sécurité ne les surveille ou ne leur donne des instructions pour utiliser l'appareil.
18. Les enfants doivent être surveillés pour s'assurer qu'ils ne jouent pas avec l'appareil.
19. Cet appareil n'est pas conçu pour être commandé au moyen d'une minuterie externe ou d'un dispositif de télécommande séparé.
20. La surface de l'élément chauffant est soumise à une chaleur résiduelle après l'utilisation.

## CONSERVEZ CES INSTRUCTIONS

---

CET APPAREIL EST UNIQUEMENT À USAGE DOMESTIQUE.



L'appareil est équipé d'un cordon court afin de réduire les risques d'enchevêtrement ou de chutes sur le cordon. Des rallonges peuvent être utilisées à condition que toutes les précautions soient prises lors de leur utilisation.

Si vous vous servez d'une rallonge, sa puissance électrique indiquée devra être égale ou supérieure à celle de l'appareil; Le cordon devra être arrangé de manière à ce qu'il ne pende pas depuis le haut d'un comptoir ou d'une table où il serait à portée de main des enfants et où il occasionnerait des accidents dus à une chute ou à un enchevêtrement. L'appareil a une prise polarisée (l'une des lames est plus large que l'autre). Pour réduire les risques de chocs électriques, la prise s'insère dans un seul sens à l'intérieur d'une prise murale polarisée. Si la prise ne s'adapte pas correctement dans la prise murale, retournez-la. Si elle ne s'adapte toujours pas, contactez un électricien spécialisé. Ne cherchez en aucun cas à modifier la prise.

# IMPORTANT SAFEGUARDS (cont.)

These WARNINGS and CAUTIONS are intended to prevent property damage or personal injury to you and others.

■ The degree of danger or damage by the misuse of the product is indicated as follows:














 



 <b>WARNING</b> Indicates risk of serious injury or death.	 <b>CAUTION</b> Indicates risk of injury, household or property damage if mishandled.
---	--

■ Prohibited or required actions are indicated as follows:

 Indicates a prohibited operation.	 Indicates a requirement or instruction that must be followed.
---	---












\*Keep this Operating Instructions readily available for users to easily refer to at any time.

\*The illustrations used in this Operating Instructions may vary from the actual product you have purchased.

 <b>WARNINGS</b>	
<div style="border: 1px solid black; padding: 5px;">  <b>Do not modify the product. Only a repair technician may disassemble or repair this unit.</b>            Attempting to do so may cause fire, electric shock or injury. Make any repair inquiries to Zojirushi Customer Service.         </div>	<div style="border: 1px solid black; padding: 5px;">  <b>Do not allow the prongs of the Appliance Plug to become soiled with dust or come into contact with any metal objects.</b>            This may cause electric shock, short circuit or fire.         </div>
<div style="border: 1px solid black; padding: 5px;">  <b>Do not immerse the product in water or splash it with water.</b>            Doing so may cause short circuit or electric shock.         </div>	<div style="border: 1px solid black; padding: 5px;">  <b>Use only an electrical outlet rated at 15 amperes minimum, and do not plug other devices into the same outlet.</b>            Plugging other devices into the same outlet may cause the electrical outlet to overheat, resulting in fire.         </div>
<div style="border: 1px solid black; padding: 5px;">  <b>Do not immerse the plug receptacle of the Main Body or the Power Cord in liquid, or allow liquid to get on these parts.</b>            Doing so may cause short circuit or electric shock.         </div>	<div style="border: 1px solid black; padding: 5px;">  <b>Insert the Power Plug completely and securely into the electrical outlet.</b>            A loosely inserted Power Plug may cause electric shock, short circuit, smoke or fire.         </div>
<div style="border: 1px solid black; padding: 5px;">  <b>Do not plug or unplug the Power Cord if your hands are wet.</b>            Doing so may cause electric shock or injury.         </div>	<div style="border: 1px solid black; padding: 5px;">  <b>Stop using immediately if you notice any of the following symptoms indicating a malfunction or breakdown.</b>            Continued use of the product may cause smoke, fire, electric shock or injury.         </div>
<div style="border: 1px solid black; padding: 5px;">  <b>Do not use this product for deep frying.</b>            Doing so may cause fire.         </div>	<div style="border: 1px solid black; padding: 5px;"> <p>&lt;Examples of abnormalities/malfunctions&gt;</p> <ul style="list-style-type: none"> <li>• The Power Plug or Power Cord has become very hot.</li> <li>• The Power Cord is deeply damaged or deformed.</li> <li>• The electricity turns on and off when the Power Cord is touched or moved.</li> <li>• There is a burning smell.</li> <li>• You feel a tingle or slight electrical shock.</li> <li>• The Operation Light does not turn on after the product has sufficiently cooled down, even when the Temperature Control Lever is set to a setting other than OFF.</li> <li>• The Operation Light does not turn off even though the Control Lever is turned to OFF. etc.</li> </ul> <p><b>If you notice any of the above symptoms, unplug the product immediately and contact the store where you purchased it or Zojirushi Customer Service for check-ups and/or repairs.</b></p> </div>
<div style="border: 1px solid black; padding: 5px;">  <b>Do not use a power source other than 120V AC.</b>            Use of any other power supply voltage may cause fire or electric shock.         </div>	<div style="border: 1px solid black; padding: 5px;">  <b>This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.</b> </div>
<div style="border: 1px solid black; padding: 5px;">  <b>Do not use the product if the Power Plug or Power Cord is damaged or if the Power Plug is loosely inserted into the electrical outlet.</b>            Doing so may cause electric shock, short circuit or fire.           <div style="text-align: right; margin-top: 5px;">  </div> </div>	
<div style="border: 1px solid black; padding: 5px;">  <b>Do not allow children to use the product unsupervised. Keep it out of the reach of infants.</b>            May cause burns, electric shock or injury. In particular, be careful not to burn yourself on the edges of the Pan.         </div>	
<div style="border: 1px solid black; padding: 5px;">  <b>Do not allow infants or children to put the Appliance Plug in their mouth. Doing so may cause electric shock or injury.</b>            Take special precautions with children and infants.         </div>	
<div style="border: 1px solid black; padding: 5px;">  <b>Do not damage the Power Cord.</b>            Do not bend, pull, twist, fold, or attempt to modify the Power Cord. Do not place it on or near high temperature surfaces or appliances, under heavy items or between objects. A damaged Power Cord can cause fire or electric shock.         </div>	



## CAUTIONS

 <p><b>Do not touch any parts that have become hot (aside from the Cover Knob, Handles or the Temperature Control Lever) while using the product, or for a while after use.</b> Touching hot surfaces may cause burns.</p>	 <p><b>Unplug the Power Plug from the outlet when the product is not in use.</b> Leaving the Power Plug in an outlet may cause the insulation to become damaged, resulting in electric shock, short circuit or fire.</p>
 <p><b>Do not place or use the product on unstable surfaces or on surfaces that are vulnerable to heat.</b> Doing so may cause fire.</p>	 <p><b>Always unplug the product by holding the Power Plug, not by pulling the Power Cord.</b> Pulling the Power Cord to unplug the product may cause electric shock, short circuit or fire.</p>
 <p><b>Do not directly heat canned or bottled foods as the can or bottle may explode and cause burns or injury.</b></p>	 <p><b>Please allow the product to cool down before cleaning.</b> Touching hot areas may cause burns. (See p. 9 for the cleaning and maintenance of the Pan.)</p>
 <p><b>Do not use the product near walls, furniture or beneath shelving.</b> Steam or heat may damage, discolor or deform walls, furniture or shelving.</p>	 <p><b>During preheating or cooking, move birds and small animals that may be sensitive to smoke or smells to other rooms, and open windows or turn on exhaust fans.</b></p>
 <p><b>Do not use other Power Cords than the one provided. Do not use the Power Cord for other appliances.</b> Doing so may cause malfunction or fire.</p>	 <p><b>If the Power Cord is damaged, it must be replaced by an appropriate cord or assembly made available by the manufacturer or its service agent.</b></p>
 <p><b>Do not use this product for other than intended purposes.</b></p>	

 
## IMPORTANT

- **Do not use this product for other than stewing, grilling or steaming foods.**
- **Do not place the product over an open flame (such as a gas stovetop), or on top of an electric heater, an induction heater, an induction cooking heater or the likes. (Doing so may cause a fire or malfunction.) The Pan may be used over an open flame.**
- **Do not use other pans with the product.**
- **Do not turn the power on without setting the Pan in the Main Body. Doing so may cause fire.**
- **Do not leave the Heating Plate with foreign objects attached. It may become stuck to the plate and cause rust.**
- **Handle the product gently; otherwise it may cause malfunction or breakdown.**
- **Please follow these instructions to ensure extended use and for the protection of the Pan's nonstick coating:**
  - \*Do not use metal ladles, spatulas or the like. Doing so may damage the surface.
  - \*Do not scratch the Pan with sharp objects such as knives and forks.
  - \*Do not cover the product and preheat or preheat it for a prolonged period of time.
  - \*Do not use abrasive cleansers, scouring powders, brushes (nylon/metal), eraser pads, bleach or anything that may damage the surface of the product. Doing so may cause deformation, discoloration or scarring of the product.
  - \***Always clean the surface and the bottom of the Pan thoroughly after use.** Acid (vinegar) or salt contents (sauce, soy sauce or salt) may cause corrosion or the product may not perform well.
  - \*Do not use detergents other than dishwashing soap such as chlorine based alkaline detergents or those containing acidic ingredients. Doing so may cause corrosion.
  - \*Do not leave cooked foods in the Pan. Doing so may cause rust.
- **Please follow these instructions to avoid breakage of the glass Lid:**
  - \*Do not cool it down too fast.
  - \*Do not drop or apply strong impact.
  - \*Do not place directly on fire.
- **Do not use the Pan directly on the stovetop burner for other than preparing stew-type menus.**  
Doing so may cause the nonstick coating to peel off, corrode, or cause the Pan to deform or discolor.
- **This appliance is intended for household use and similar applications listed below:**
  - Staff (employee) kitchen areas in shops, offices and other working environments.
  - ※ **This appliance is not intended for use by many unspecified people for a long period of time.**  
This appliance must not be used in the following areas:
    - Farm houses. ● By clients in hotels, motels and other residential type environments. ● Bed and breakfast type environments.



# PARTS NAMES

Cover Knob

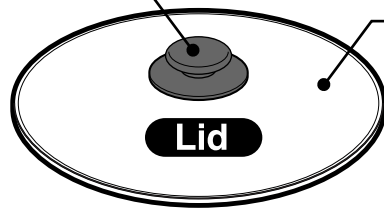

**Lid**

**Lid Glass Type: Tempered Glass**  
**Tempering Type: Complete Physical Tempering**

 
**CAUTION**

**This is not heat-resistant glass.**

- Do not hit or drop.
- Do not heat up or cool down too quickly.
- Handle carefully.
- The Lid is tempered glass and likely to shatter into small fragments if broken.
- Do not preheat with the Lid on.
- Do not subject to over an open flame.

Use oven mitts or other means for protection when the Pan is hot.

**Handle**  
 (Located at 2 positions: right & left edge)

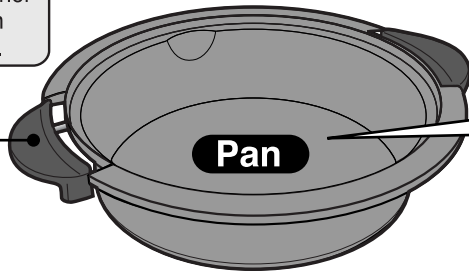

**Pan**

 
The Pan can be used directly on the stovetop to shorten precooking time.

**Heating Plate**

- Please remove the protective sheet placed between the Heating Plate and the Pan before initial use.

**Plug Receptacle**


**Holder**  
 Located at the bottom edge of both sides.

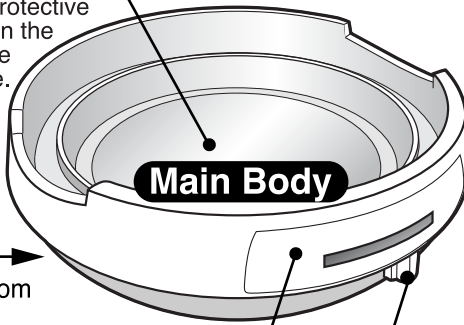

**Main Body**


**Control Panel**  
**Control Lever**

 **Power Cord**

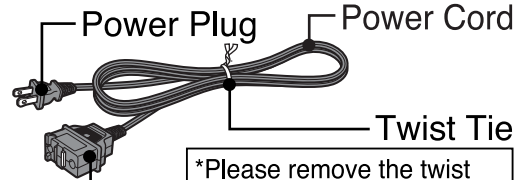

- \*Please remove the twist tie holding the Power Cord before use.
- \*Do not use the Power Cord bundled up. Doing so may cause the Power Cord to become excessively hot, resulting in malfunction.


**Appliance Plug**

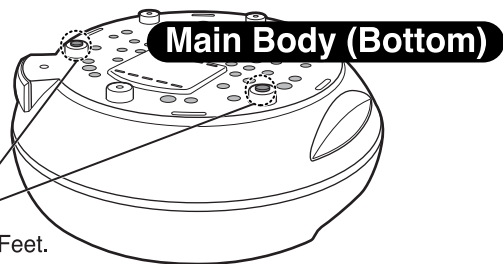 

**Main Body (Bottom)**


**Rubber Feet (2)**  
 • Do not remove the Rubber Feet.

 **Control Panel**

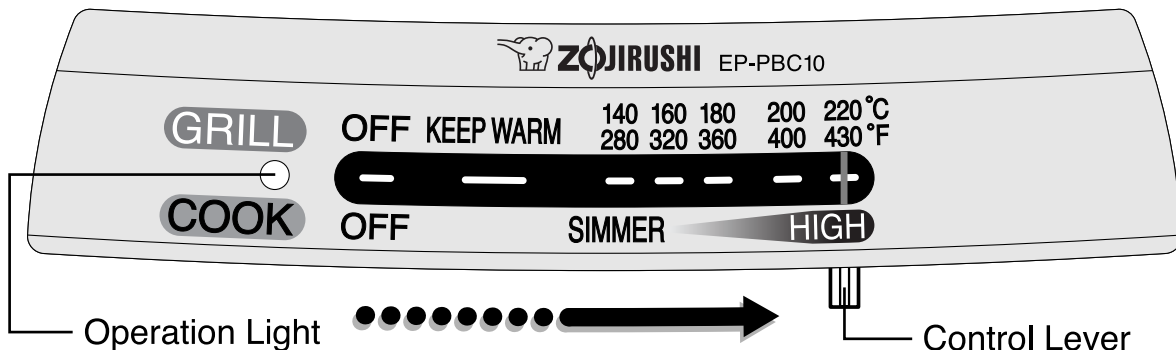


# HOW TO USE      HOW TO PREPARE

 ① Set the Pan on the Main Body.

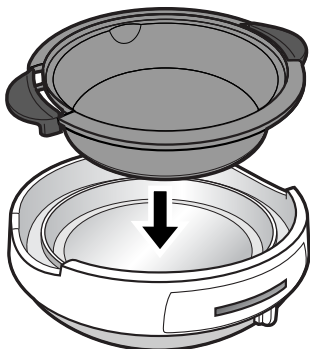


② Turn the Control Lever to OFF and plug in the Power Cord.

 Plug Receptacle

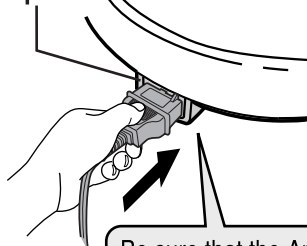

 Be sure that the Appliance Plug is clean and free from any foreign objects.

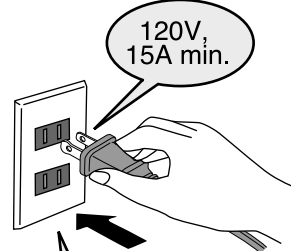

Be sure to insert the Power Plug into the electrical outlet securely.

\*Be sure to wipe off all moisture on the Heating Plate and on the bottom of the Pan. (Moisture or water may decrease the product's ability to heat or cause malfunction.)

\*Set the Pan securely. Make sure it is not slanted.

## ■ Cooking Tips



### Precook stew-type menus directly on the stovetop burner in the Pan:

The Pan can be used directly on the stovetop burner for quicker heating and preparation.

**Do not heat the Pan empty on stovetop burner.**

(Do not use the Pan on an induction heater or cooktop.)

 
\*Adjust the flame to the Pan size. The Handles may become burnt or deform if the flames are too strong.

\*Do not use the Pan directly on the stovetop burner for other than preparing stew-type menus (such as sizzling, grilling or sautéing).

\*To prevent burns, always use oven mitts when holding the Handles as they may become hot.

\*Do not heat the Pan while empty over an open flame. (Doing so may damage the nonstick coating.)

\*On a gas stovetop burner or cooker with a sensor, the sensor may operate and cooking may not be possible.

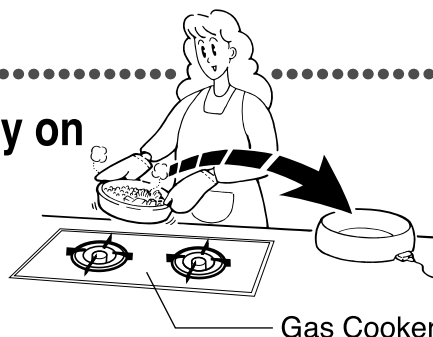

### Utilize the Lid:

The surface temperature of the Pan can become 68-86°F higher when the Lid is covered.

\*Sizzling and steaming menus (such as frying dumpling, hamburger, steak, fried egg, etc.) can be cooked faster and softer.

\*Water or broth will boil faster.

### Be careful when removing the Lid:

\*Steam may arise from the gap between the Lid and the Pan.

\*Hot oil may sputter from the gap between the Lid and the Pan when grilling steaks.

# HOW TO USE      HOW TO COOK

## Cooking in the Pan:

### Ideal for cooking hot pots or stews

- 1) Pour water or soup stock in the Pan and cover the Lid.
- 2) Adjust the Control Lever to HIGH. The Operation Light will turn on.
- 3) When the water or soup stock reaches a boil, add ingredients and begin cooking.

#### Power guidelines for pot and stew menus:

Power	Menus
SIMMER	<i>Yose-nabe</i> (Seafood, chicken, tofu, noodles, and vegetables cooked in stock) <i>Chanko-nabe</i> (Mixture of meats and vegetables cooked in a pot favored by Japanese Sumo wrestler) <i>Shabu Shabu</i>
↑ ↓	
HIGH	<i>Yudofu</i> (Boiled <i>tofu</i> cooked in stock) <i>Oden</i> (Vegetables and fish cakes cooked in stock) <i>Sukiyaki</i>

### Ideal for grilling and sautéing

- 1) Adjust the Control Lever to the preferred temperature and preheat. (The Operation Light will turn on and the product begins operating.)

• Do not cover the Lid while preheating.  
(If the pan gets too hot, it may damage the nonstick coating.)

- 2) Begin cooking when preheating completes.

Estimated preheat time:

About 8 minutes

#### Temperature guidelines for grilling and sautéing:

Power	Menus
430°F 220°C	<i>Yaki-niku</i> (BBQ beef), Fried noodles, Steaks and <i>Sukiyaki</i> etc.
400°F 200°C	<i>Okonomi-yaki</i> (Japanese pancakes) etc.
360°F 180°C	<i>Gyoza</i> (grilled dumplings) etc.
320°F 160°C	Pancakes etc.
280°F 140°C	Crepes, Thin omelets etc.
KEEP WARM	Keeping foods warm at the optimum temperature

 
\*The above temperatures are estimated surface temperatures of the Pan when uncovered.

- Use hot water (not water) to steam and finish grilling *Gyoza* (grilled dumplings).
- When keeping food warm, turn the Control Lever to KEEP WARM.
- You may hear some noise or small clicking sounds during use. This is due to the expansion of the Main Body by the heat and does not indicate a malfunction.

- You may notice that the Operation Light turns on and off during preheat and cooking. This is due to the product controlling the temperature and does not indicate a malfunction.
- You may notice some smell or smoke emitting from the product at initial use, but this is normal and does not indicate a malfunction.

## AFTER USE...

- 1) Turn the Control Lever to OFF.
- 2) Unplug the Power Plug and the Appliance Plug.

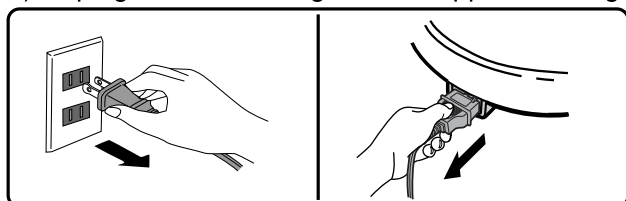

\*Be sure to unplug the product by holding the Power Plug, not by pulling the Power Cord.

\*Be sure to unplug the Power Cord after every use.

\*Please allow the product to cool down before cleaning (for about 40 minutes after cooking).



# CLEANING AND MAINTENANCE

Be sure to clean thoroughly after every use. Leaving burnt foods on the Pan may cause scorching, and will become difficult to remove.

- Be sure to unplug the Power Plug and allow the product to cool down before cleaning.
  - Do not heat the Pan over an open flame while empty. (Doing so may damage the nonstick coating.)
- 
- Do not use the following:
    - Detergents other than mild kitchen detergent, such as thinner and bleach. (Using these may cause discoloration, cracks, degradation or corrosion.)
    - Polishing powder, nylon brushes, scrub brushes, anything made with metal, eraser pads, hard nylon sponges and abrasive cleaners. Doing so may cause corrosion.
  - When using chemically treated cloths, do not rub too hard or leave them on the product for a long time as the surfaces of the product may be damaged by chemical reactions.
  - After cleaning, wipe away any moisture using a dry, soft cloth.
  - Do not use a dishwasher or dish-dryer. (Doing so may cause scratches, deformation or discoloration.)

<b>Lid Pan</b>	<p>1) Wash with a soft sponge. To wash thoroughly, use a dishwashing soap.</p> <p>2) Wipe clean with a dry cloth after rinsing.</p> <p>*Allow the Pan and Lid to cool before cleaning.</p> <p>*Soak the Pan in warm water if food becomes stuck, then wash with a soft sponge.</p> <p>*Rinse the Lid thoroughly to ensure that there is no dishwashing soap remaining. The Lid may discolor if alkaline-based detergent is used.</p> <p>*After cleaning the Pan, wipe thoroughly with a dry cloth, set in the Main Body and turn the power on to allow it to dry completely. Be sure not to overheat the Pan. After the surface of the Pan is completely dry, apply a thin layer of vegetable oil to protect the surface.</p>
<b>Heating Plate</b>	<p>Soak a cloth in hot water, wring out all excess moisture, and wipe clean.</p> <p>*If any objects are stuck to the Heating Plate, lightly polish them off with sand paper of about No.400 after dipping in water.</p> <p>*Do not splash it with water or soak in water. Doing so may cause breakdown.</p>
<b>Main Body</b>	Clean and wipe with a cloth soaked in water and wrung well.
<b>Power Cord (Appliance Plug · Power Plug)</b>	Wipe it clean with a soft dry cloth.

Any other servicing should be performed by an authorized service representative.

## REPLACEMENT PARTS

\*Please replace damaged parts for optimum performance.

\*When replacing parts, please check the model number and the parts name beforehand, then contact the store where you purchased the product or Zojirushi Customer Service.

**Zojirushi Customer Service**  
 1-800-733-6270  
 www.zojirushi.com

Parts Names	Parts Number
Lid	BG311001R-00
Pan	7190730001-00

# RECIPES

## NOTE

The measurements used in these Recipes:

- 1 Cup = approx. 8 oz.
- 1 Tablespoon = 0.5 oz.
- 1 teaspoon = 0.2 oz.

## SUKIYAKI

HIGH ~ SIMMER



### Ingredients (4 servings):

1 lb. thinly sliced beef loin  
Beef tallow  
1 pack *Tofu*  
1/2 lb. *Ito Konnyaku*  
2 stalks green onions  
8 fresh *Shiitake* mushrooms

1 bunch *Shungiku* (garland chrysanthemum)  
1/4 Chinese cabbage  
1 onion  
4 eggs

### Seasonings:

Soy sauce  
*Mirin*  
Sugar

### How to cook:

- 1) Cut the beef into bite size pieces. Cut *Tofu* into large blocks. Lightly boil *Konnyaku*, drain and cut to preferred length. Cut green onion into bite-size length. Cut off the bottom of the *Shiitake* and *Enoki* mushrooms. Cut *Shungiku* and Chinese cabbage in 1-1/2 to 2 inch strips and cut onion into large pieces.
- 2) Set the Control Lever to **HIGH**. When the Pan heats up, melt the beef tallow and lightly stir-fry half the beef. Add some vegetables and continue to stir-fry.
- 3) Add soy sauce, *Mirin* and sugar to taste. Then add half of the rest of the ingredients and continue to cook. Once they are cooked through, dip them into a beaten egg and enjoy. As you eat, continue adding ingredients and seasonings.

\*Adjust the power between **HIGH** and **SIMMER** to change the cooking temperature.

# RECIPES Cont.

## NOTE

The measurements used in these Recipes:

- 1 Cup = approx. 8 oz.
- 1 Tablespoon = 0.5 oz.
- 1 teaspoon = 0.2 oz.

## SHABU-SHABU

HIGH ~ SIMMER



### Ingredients (4 servings):

8 cups water  
1 to 1-1/2 lbs. beef or pork, thinly sliced  
*Shabu-Shabu* sauce (available in Asian markets)

### Other ingredient options:

Green onions (or welsh onion)  
Chinese cabbage  
Fresh *Shiitake* mushrooms  
*Shirataki* (*Konnyaku* noodles)

### How to cook:

- 1) Thinly slice green onions diagonally and cut Chinese cabbage into 1-1/2 to 2 inches strips. Cut off the hard part at the bottom of the *Shiitake* mushrooms. Run *Shirataki* in boiling water and cut into 3-4 inches length.
- 2) Add water in the Pan, cover the Lid and turn the Control Lever to **HIGH**.
- 3) Once the water begins to boil, add some of the vegetables, and when it begins to boil again, take a slice of the meat and swirl it in the boiling water to cook. Dip in the *Shabu-Shabu* sauce to enjoy.

\*Adjust the power between **HIGH** and **SIMMER** to change the cooking temperature.

# RECIPES Cont.

## NOTE

The measurements used in these Recipes:

- 1 Cup = approx. 8 oz.
- 1 Tablespoon = 0.5 oz.
- 1 teaspoon = 0.2 oz.

## CORN RISOTTO

**HIGH** ~ **SIMMER**



### Ingredients (2-3 servings):

5-1/2 oz. long grain rice  
1/4 onion  
1 cup corn (canned or frozen)  
3 cups soup stock (chicken broth, etc.)  
Salt and pepper  
Olive oil

2 tsp. chopped parsley  
2-5 Tbsp. grated (parmesan) cheese

☆Indica rice (long grain) is ideal for this menu.

### How to cook:

- 1) Rinse rice and drain. Finely chop onion.
- 2) Turn the Control Lever to **HIGH**. When preheating completes, add olive oil and stir-fry the onions from Step 1 above and then the rice.
- 3) When the rice turns translucent, add the soup stock and cover the Lid. Turn the Control Lever to **SIMMER** once it begins to boil.
- 4) After about 15 minutes, add corn and turn the Control Lever to **HIGH** again. When it reaches a boil, add salt and pepper to taste.
- 5) Serve in a bowl and garnish with parsley and grated cheese.

# RECIPES Cont.

## NOTE

The measurements used in these Recipes:

- 1 Cup = approx. 8 oz.
- 1 Tablespoon = 0.5 oz.
- 1 teaspoon = 0.2 oz.

## STEAK

**430°F (220°C)**



### Ingredients (4 servings):

4 cuts sirloin or fillet steak  
Salt and pepper  
Vegetable oil  
◆Garlic slices (optional)

### Garnish:

Carrots, potatoes, kidney beans  
(Broccoli and cauliflower also make great garnishes)

### How to cook:

- 1) Prepare the garnish first by boiling the carrots, potatoes and kidney beans.
- 2) Turn the Control Lever to **430°F(220°C)**. When preheating completes, heat vegetable oil. Toast garlic slices until they turn golden brown and reserve. Flavor the steak with salt and pepper and place on the Pan. Once the steak becomes golden brown, turn it over and cover the Lid.
- 3) Grill the meat until your preferred finish. Serve on a warmed plate along with the garnish. Garnish steak with roasted garlic.

\*Be careful when uncovering the Lid during cooking as oil may sputter.

# TROUBLESHOOTING GUIDE

Please check the following points before calling for service.

Problems	● Cause (Points to check)
The Pan does not get warm (power does not turn on).	*The Power Plug is not plugged in. → Connect the Power Plug.
	*The Appliance Plug is not connected properly. → Connect the Appliance Plug properly.
Does not cook well.	*Preheating was insufficient. → Preheat well before beginning to cook (approx. 8 minutes).
It takes too long to boil or it does not boil.	*Water or broth was boiled without covering the Lid. → Covering the Lid when cooking helps liquids come to a boil quicker.
	*The temperature of the water or broth was lowered by adding too much ingredients at one time. → Add ingredients gradually.
	*Heating the water or broth directly on a stovetop burner will take less time.
	*The Heating Plate is soiled, and heat is not conducting well to the Pan. → Clean the Heating Plate. (See pg. 9 "CLEANING AND MAINTENANCE")
Food scorches or burns too much.	*The Pan is soiled (food is stuck on its surface). → Clean the Pan. (See pg. 9 "CLEANING AND MAINTENANCE")
The Power Cord gets hot.	*Although the Power Cord may get hot when cooking, this is not abnormal.

# SPECIFICATIONS

Model No.	EP-PBC10
Rating	AC120V 60Hz
Electric Consumption	1,300W
Length of the Power Cord	6.3 feet (1.9m)
External Dimensions (approx. inches)	15.2 (W) × 13.8 (D) × 7.7 (H)
Weight	approx. 8.9 lbs.
Temperature Control	Keep Warm ~430° F (220°C)

- The product is not suitable for use in countries or regions with different power supply voltages or frequencies.
- The external dimensions shown are measurements with the Pan attached, and with the Lid on.



**Memo** Please use as notations.

A large rectangular area with a dashed horizontal line for writing. The area is white and is framed by a thick grey border. The dashed line is a single horizontal line that spans the width of the area, positioned near the top. The rest of the area is empty, intended for handwritten notes.



[www.zojirushi.com](http://www.zojirushi.com)