



Household Use Only

Stainless Steel Cool Bottle INSTRUCTION MANUAL

Please read before use. Keep these instructions for future references.

Important Safeguards

Please follow these instructions to prevent scalding, deterioration and discoloration of beverages, as well as malfunction and staining of the bottle.

This bottle if for holding COLD BEVERAGES ONLY.
Do not use for other than keeping beverages cold.

Do not allow infants or small children to play with this bottle. Doing so may lead to injuries.

Use only with the Lid Set

Use only with the Lid Set and Lid Cover securely attached. Always close the Lid Cover and/or Button Cover after use.

Leakage may stain clothing or bags.

Be sure to attach all the Gaskets when using the bottle.

Leakage may stain clothing or bags.

Avoid placing near heat sources such as heaters and gas stoves.

 
Doing so may cause deformation or discoloration of the bottle.

(*Only for models with Handles) Do not swing the bottle by the Handle.

Doing so may cause injury or breakage.

Leave 1cm (1/2-inch) room on top when filling the bottle.

If you overfill the bottle and attach the Lid Set, the beverage may overflow. In addition, beverage may enter the Lid Set and cause leaks later. If the bottle leaks, discard some of the beverage and re-attach the Lid Set and Lid Cover.



Avoid modifying or disassembling the Main Body.

Doing so may cause accidents or damage the product.

Do not damage the nonstick coating inside the Main Body.

Scratches may cause rust, holes or other problems.

STAINLESS COOL BOTTLE(E/K/T/C) / A

Important Safeguards (continued)

Do not carry or swing the bottle by the Button Cover or the Cap String. (*Only for models with a Button Cover or Cap String) Do not hold or carry the bottle

Fingers may become pinched or you may drop the bottle, causing breakage.

by the Lid Set or Lid Cover.

Never fill with hot beverages.

Doing so may cause burns.

Clean the Main Body after every use.

Not cleaning thoroughly may cause the Main Body to rust, beverages to spoil, or cause pinholes.

Consume beverages within the same day to prevent from spoiling.

Beverages left inside for a long period of time may spoil and produce gas that may cause the Lid Set to burst or beverages to spill, causing injuries and scalds.

Do not remove the sticker from the bottom of the Main Body.

Doing so may cause rust, holes or other damage.

Do not drink out of the bottle while driving. Always close the Lid Set securely after drinking.

Doing so may stain the interior of the car or clothes. Attempting to use while driving may also cause serious accidents.

(*Only for models with a Carrying Strap)

- Do not play or perform other activities with the Carrying Strap around your neck, or hang from nearby items by the Carrying Strap. Doing so may lead to choking.
- Do not swing the bottle by the Carrying Strap.

 Doing so may cause beverages to leak from the bottle. In addition, the bottle may hit surrounding people or objects, resulting in injury or breakage.
- Do not pull forcefully on the Carrying Strap. Doing so may cause it to break.

Do not fill the bottle with the following:

- Dry ice and carbonated drinks:
 - Contents may spill out or the pressure may cause the Lid Set to burst, causing injuries.
- Liquids high in sodium such as soup and Kobu-cha: Although the liner is made of 18/8 stainless steel and is nonstick coated, salt may cause rust resulting in loss of thermal insulation.
- Dairy products and fruit juice:

 If left inside for a long period of time, contents may spoil and produce gas that may cause the Lid Set to burst, causing injuries.
- Fruit pulp and tea leaves:
 May become caught on the Stopper Gasket and cause contents to spoil.

Important Safeguards (continued)

When filling the bottle with sports drinks:

(*Excludes models designed to hold sports drinks)

- Rinse the inside of the bottle as soon as possible after consumption to prevent rust and/or pinholes.
- ◆Clean the inside using a soft sponge to protect the nonstick coating from being scratched.

(Scratches to the coating may cause rust and pinholes.)

Warnings & Cautions

Avoid dropping or hitting against hard surfaces.

Damage to the plastic or stainless steel surface of the bottle may reduce its ability to keep beverages cold.

Clean the Stopper and all the Gaskets thoroughly after use.

Not doing so may cause decay, mold, odor or discoloration. It may also cause leaks.

Do not attach parts other than those specifically for this product.

Doing so may cause leaks or breakage.

Do not place cans, bottles, etc. inside the Main Body.

These may deform or damage the Main Body.

When ice is placed inside, pressure may rise, and cause the Stopper Gasket to come off when the Lid Cover is removed. If this happens, re-attach the Stopper Gasket.

Break up large ice cubes into smaller pieces before placing them in the Main Body.

Forcing large cubes into the Main Body may deform or damage it.

Do not strongly rub the design on the outside of the Main Body.

It may come off.

When not using the Cover, store it in a place with good air circulation.

High levels of humidity may result in formation of wrinkles.

When attaching the Lid Set, hold the Main Body upright and attach firmly.

When outside temperatures are high, moisture may bead on the Lid Set.
Stand the product upright when placing it in bags.

Warnings & Cautions (continued)

Avoid immersing the Cover in water or washing it in a washing machine.

(*Excludes models with machine-washable Covers)

Doing so may damage the fabric or remove its coating.

Turn the Main Body upside down to check that there are no leaks.

The rattling noise that may be heard when the Main Body is shaken comes from the copper or aluminum foil in the vacuum insulation to increase cold retention and does not indicate a malfunction.

The illustrations used in this instruction manual may vary from the actual product you have purchased.

How to Take Care of Your Bottle

 Clean the product after each use to prevent odors and mold, and to keep the product sanitary.

Exterior Lid Set Lid Cover

- 1) Wash with a sponge dipped in lukewarm water and mild kitchen detergent.
- ②After rinsing, shake several times and thoroughly wipe dry.
- After use, be sure to remove the Gaskets, wash thoroughly, and re-attach them.
- Always disassemble the Lid Set before washing and drying (for those that can be disassembled.)
- After washing the Lid Set, shake out all the water, making sure that no water remains.
- Use a commercially available small brush to wash hard-to-clean parts.

How to Take Care of Your Bottle (continued)

Interior	1) Wash with warm water and mild dishwashing liquid using a soft sponge with handle.2) Then rinse and wipe moisture out to dry.
	Dip a soft cloth in lukewarm water and mild dishwashing liquid, squeeze the cloth and wipe off any dirt.
Cover	(*Only for machine-washable Covers) Place the Cover in a laundry net and wash using the gentle or dry cycle. Allow to air dry. ● Do not dry in a clothes-dryer. ● If washing by hand, wash gently using cold or warm water under 30°C/86°F, and dry completely. ● Do not use detergents containing ethanol or other alcohol.
Carrying Strap	Wipe with a soft cloth immersed in warm water and wrung out thoroughly. (*Only for models with reflective straps) ● Do not rub the Carrying Strap forcefully. The reflective material may rub off, reducing its reflective performance. (*Only for models with nameplates) ● Remove the nameplate before cleaning the Carrying Strap. Otherwise, the sticker on the nameplate may rub off.

When Cleaning Your Product:

To protect the paint, print or stickers on the outside of the Main Body:

- •Do not use a dishwasher or dish-dryer. Do not boil to sanitize.
- Do not use bleach on the outside of the Main Body.
- Do not clean with thinner, benzene, abrasive cleaners or other harsh cleaners.
- Do not use chlorine type bleach.
- Do not soak in water for an extended period of time.
- •Wipe moisture off thoroughly to prevent water stains or rusting.

How to Take Care of Your Bottle (continued)

To Remove Rust Spots and Water Stains:

You may find rust spots or water stains caused by impurities in the water. To remove these stains, fill the Main Body with hot water with 10% vinegar and let it stand for 30 minutes to an hour without attaching the Lid Set, then wash the interior thoroughly.

To Remove Coffee and Tea Stains:

To remove coffee and tea stains from the interior and the Stopper, we recommend using Zojirushi's cleaning detergent SB-ZA01/SB-ZA01E. Always remove the Lid Set when using SB-ZA01/SB-ZA01E. Contact Zojirushi Customer Service or your local dealer for further information.

With use, tea stains may change the color of the product. Even when washed, the discoloration will not completely disappear, but this does not affect normal use.

Replacing the Stopper Set & Gaskets

We take care in only using materials that are safe and hygienic for food contact. However, if plastic parts become damaged or its surface becomes rough, please replace them for optimum performance. The Stopper may need to be replaced due to time and wear. Please check them about once a year. When replacing parts, please record the model number and part name beforehand. Then contact either the store where you purchased the product or Zojirushi Customer Service. Replacement parts may be available for an additional charge.