

 


HOUSEHOLD USE ONLY

STAINLESS STEEL VACUUM BOTTLE Model No. **SV-GGK** Instruction Manual

Thank you for your purchase of this quality Zojirushi product. We are confident that it will give you top performance and optimum satisfaction for many years. To ensure this, please read and follow the important guidelines below.


Name of Each Part

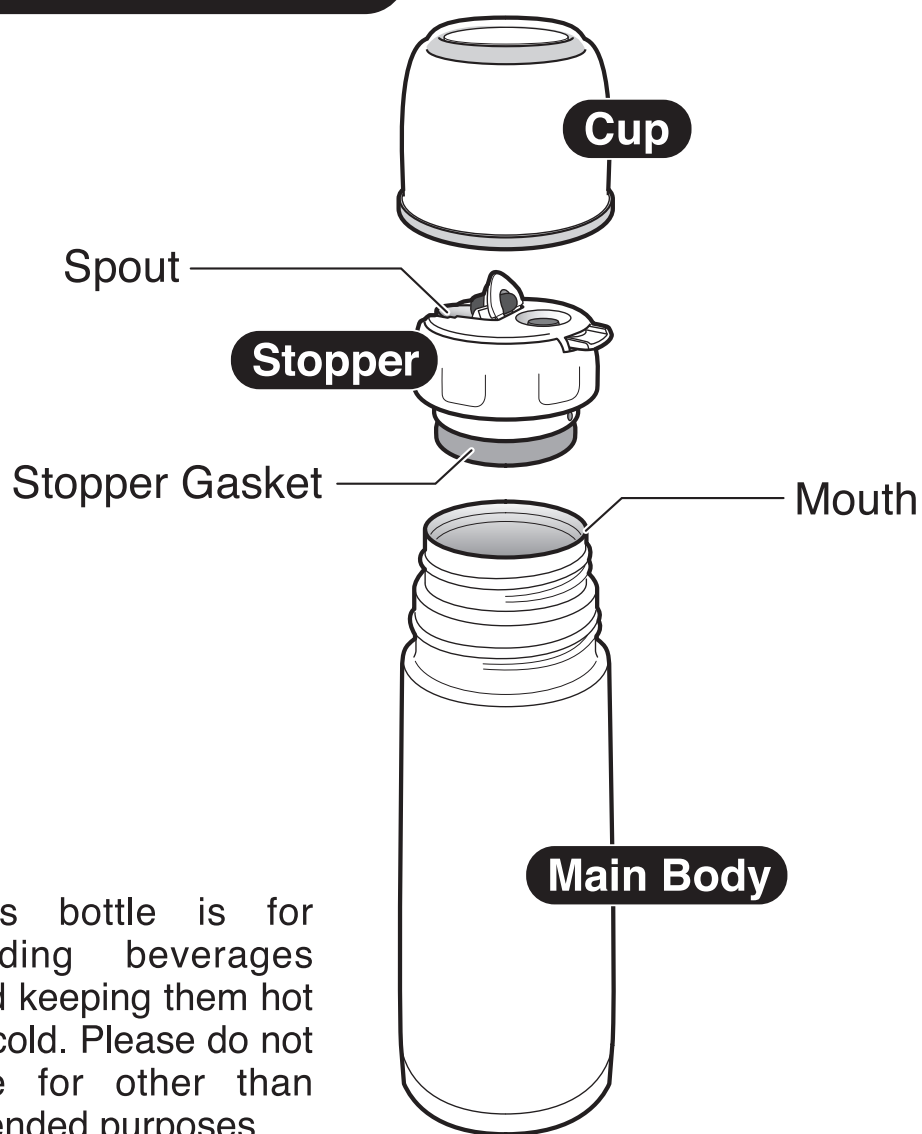

This bottle is for holding beverages and keeping them hot or cold. Please do not use for other than intended purposes.

Important Safeguards:

Please follow these instructions to prevent scalding, deterioration and discoloration of beverages, as well as malfunction and staining of the product.

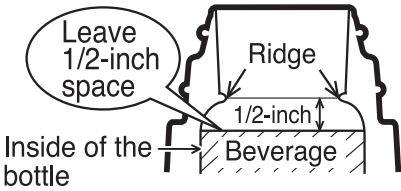Do not disassemble.	Always make sure the Stopper Gasket is on. Leave 1/2-inch room on top when filling the bottle. Contents may overflow when placing the Stopper, or the Spout may become difficult to open. Beverages may also become caught in the Stopper and leak out. 
Keep out of reach of infants and small children.	
Keep away from heat sources such as gas stoves, ovens and heaters.	
Always close the Stopper tightly to prevent beverages from spilling and make sure to close the Spout after pouring.	
Always use the Cup when drinking hot beverages. Never drink directly out of the bottle.	
Always clean thoroughly after use.	Do not heat in a microwave.
Consume beverages within the same day to prevent from spoiling.	
Do not open the Spout with the bottle close to your face or tilted toward you. Pressure built up in the bottle may cause hot beverages to spew out.	
Do not shake the bottle when it contains hot beverages. Doing so may cause scalds or injuries.	
Do not use the bottle if it loses its heat retention properties. The outside of the bottle may become very hot if hot beverages are poured inside.	
Please avoid filling the bottle with the following: <ul style="list-style-type: none">• Dry ice and carbonated drinks: contents may spill out or the pressure may cause the Spout to become difficult to open or the Stopper or Cup to burst, causing injuries.• Liquids containing salt such as soup: although the liner is made of 18/8 stainless steel and is nonstick coated, salt may cause rust resulting in loss of thermal insulation.• Dairy products and fruit juice: if left inside for a long period of time, contents may spoil and produce gas that may cause the Stopper to burst, causing injuries.• Fruit pulp and tea leaves: may become caught in the Stopper and cause contents to spill.	

Important Safeguards:

Please follow these instructions to prevent scalding, deterioration and discoloration of beverages, as well as malfunction and staining of the product.

When filling the bottle with sports drinks:

- Rinse the inside of the bottle as soon as possible after consumption to prevent rust and/or pinholes.
- Clean the inside using a soft sponge to protect the nonstick coating from being scratched.

 
The Stopper may become difficult to remove when the bottle is filled with hot beverages. In this case, press the Button to open the Spout and then remove the Stopper.

Do not forcefully remove the Stopper as it may pop out and cause scalds or injuries.

Warnings and Cautions:

Do not allow hot kettles to touch the Mouth of the bottle.

Doing so may damage the bottle.

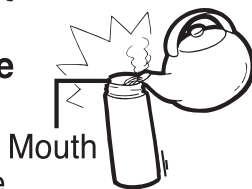

Avoid dropping or hitting against hard surfaces.

Damage to the plastic or stainless steel surface of the bottle may reduce its ability to retain heat.

Do not force large ice cubes in.

After washing, shake the Stopper several times to remove the water left inside and wipe dry.

Otherwise, the water left inside may drip out.

Do not rub the design on the outside of the bottle strongly.

Always clean the Stopper thoroughly after use.

Do not leave a tea bag inside and close the Stopper.

Hot tea may discolor if stored for a long period of time. We recommend the use of tea bags and brewing right before consumption.

The rattling noise that may be heard when the product is shaken comes from the copper or aluminum foil in the vacuum insulation to increase heat (cold) retention and does not indicate a malfunction.

You may notice condensation on the inside of the Cup when keeping warm hot beverages.

 
● The illustrations used in this instruction manual may vary from the actual product you have purchased.

How to Use:

Rinse the Cup, Stopper and the inside of the Main Body thoroughly with lukewarm water.

- Be sure that the Stopper Gasket is attached properly to prevent beverages from leaking.
- Attach the Stopper properly and turn the bottle upside down to make sure contents do not leak.


1 Remove the Cup and Stopper from the bottle by turning it counterclockwise.

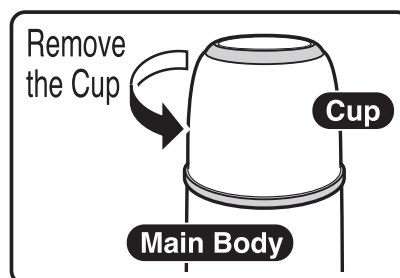

2 Fill the bottle and close the Stopper.


- Close the Stopper securely.

 Preheat or precool the bottle before filling with your beverage for better heat retention.

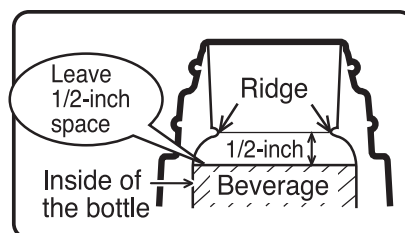

3 Pour beverage.

 - ① Stand the bottle upright and open the Spout by pressing the Button on the Stopper as illustrated by the arrow pointing down.
- ② Tilt the bottle to pour. Close the Stopper with the bottle at an upright position by pressing in the Switch as illustrated by the arrow pointing left.

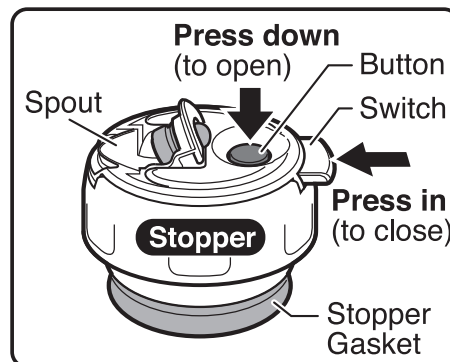

- Tilt the bottle slowly when pouring hot beverages. Pouring too quickly may cause spills and/or scalds.

■ After pouring, stand the bottle upright and close the Spout. Closing the Spout while the bottle is tilted may cause beverages to become caught in the Stopper and leak out later. Please follow these precautions:

- After pouring, stand the bottle upright and wait 2-3 seconds before closing the Spout.
- Wipe off any excess liquids on the Cup before closing.
- Store the bottle upright when carrying inside bags to prevent beverages from spilling.



SV-GGK (E/K/T/C) / C

How to Take Care of Your Bottle:

Always clean all parts thoroughly after each use.

Outside Main Body and Cup

Wash with warm water and mild dishwashing liquid using a soft sponge, rinse and dry.

Inside Main Body

Fill the bottle with warm water, close the Stopper and pour the water out through the Spout. Repeat several times. Remove the Stopper and wash the inside of the bottle with mild dishwashing liquid using a soft sponge with handle, rinse and dry.

● Keeping the inside clean will help prevent odors.

- Do not use a dishwasher or dish-dryer. Do not boil to sanitize.
- Do not clean with thinner, benzene, abrasive cleaners or other harsh cleaners.
- Do not soak.
- Do not use chlorine type bleach.
- Wipe off moisture thoroughly to prevent water stains or rusting of the product.

To Remove Rust Spots and Water Stains:

You may find rust spots or water stains caused by impurities in the water. To remove these stains, fill the bottle with hot water with 10% vinegar and let it stand for 30 minutes to an hour without attaching the Stopper, then wash the interior thoroughly.

To Remove Coffee and Tea Stains:

To remove stains from coffee, tea or hard water buildup, we recommend using Zojirushi's cleaning detergent SB-ZA01E. Please contact Zojirushi Customer Service or your local dealer for further information.

Replacement Parts:

 
We take care in only using materials that are safe and hygienic for food contact. However, if plastic parts become damaged or its surface becomes rough, please replace them for optimum performance. The Stopper and Gaskets may need to be replaced due to time and wear. Please check them about once a year. When replacing parts, please record the model number and part name beforehand. Then contact either the store where you purchased the product or Zojirushi Customer Service. Replacement parts may be available for an additional charge.

How to Take Care of Your Bottle:

Always clean all parts thoroughly after each use.

■ How to Clean the Stopper:

- ① Press the Button to open the Spout.
- ② Remove the Stopper Gasket (see illustration on right).
- ③ Wash with warm water and dishwashing soap using a soft sponge, rinse and dry.

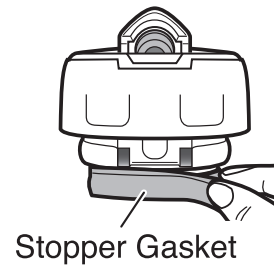

- After washing, shake the Stopper several times with the Spout open to remove water left inside, and wipe dry.
- Do not use a dish-dryer to dry. (Doing so may cause deformation.)
- Be sure to wash the Stopper Gasket after every use to prevent mold from forming.

■ How to Attach the Stopper Gasket:

- Be sure to attach the Stopper Gasket correctly to prevent malfunction or leaking of beverages.

Fit the Stopper Gasket to the Stopper as illustrated.

