



 
Household Use Only

Stainless Steel Food Jar


Model SW-E / SW-F

Instruction Manual

Name of Each Part

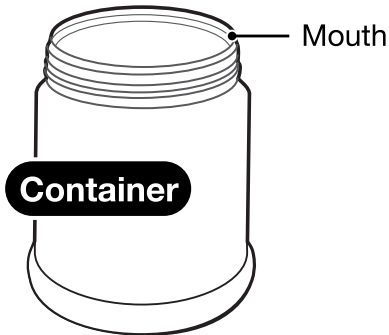

Lid Set

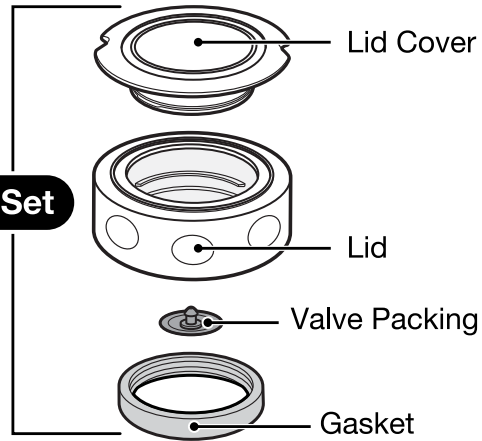 

- The illustrations used in this instruction manual may differ from the actual product you have purchased.
- Please read these instructions before use, and keep for future reference.

Warning

• Please follow these instructions to prevent injury, scalding, accidents, malfunction or performance deterioration of the product, spilling of beverages, etc.

Do not allow infants or small children to use this product. Keep out of the reach of infants and small children.

Always make sure that the parts are properly attached during use.

Do not attach parts other than those specifically designed for this product.

 
Do not use the product if its thermal insulation performance has deteriorated.

When containing hot foods or beverages:


- Do not tilt the Container suddenly when drinking hot foods or beverages.
- When pouring hot foods or beverages into the Container, be careful not to let it tip over.
- The interior of the Lid Set will become hot to the touch. Do not use the product without the Lid Cover attached.

Do not use if water enters the interior of the Vacuum Layer.

If the internal water seeps out from the Vacuum Layer, consuming it may cause illness.



 Fill the Container only up to the level shown in the illustration.

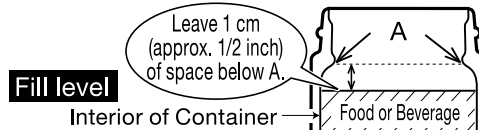

Do not disassemble the product (other than parts designed to be disassembled).

Do not heat in a microwave, as doing so may cause sparks.

How to Take Care of Your Product:

- Clean the product after each use to prevent odors and mold, and to keep the product sanitary.
- Always disassemble the product before cleaning.
- Follow the instructions for care and wash the product thoroughly before use.
- When you first use the product, there may be a plastic smell. However, this will become less noticeable with use.

When Cleaning Your Product:

- Do not boil or use a dishwasher or dish-dryer.
- Do not clean using paint thinner, polishing powders, abrasive cleansers, scrub brushes (nylon, metal wire, etc.), melamine sponges, the nylon side of an abrasive sponge, or any similar items.
- Do not use bleach as it may damage the product. Zojirushi's designated cleaning detergent SB-ZA01E may be used to clean the interior of the Container, the Lid, and the Gaskets.
- The Container is fully washable, but do not soak it in water for an extended period of time.
- If the product is not going to be used for an extended period, wash thoroughly and dry well. Store the product away from high temperatures and humidity.

Regular Care

- ① Using mild kitchen detergent diluted with lukewarm water, wash the Lid Set and the outside of the Container with a sponge and the inside of the Container with a soft sponge with a handle.
Use a small brush if necessary.
 - ② Rinse, wipe away remaining water, and leave to dry thoroughly.
- Streaks or smudges caused by rubbing on the coated portion of the Container that cannot be removed by the above method can be removed using a soft eraser.

What to Do If Rust Spots Form on the Container

- Boil for 10 minutes in water with approximately 10% vinegar. After rinsing, wipe off moisture thoroughly to dry.

What to Do If the Product Absorbs Odors

Container Lid	Remove the Lid Set and use Zojirushi's cleaning detergent SB-ZA01E. (Contact Zojirushi Customer Service or your local dealer for further information.)
Gaskets	Boil for 10 minutes in water with approximately 10% vinegar. After rinsing, wipe off moisture thoroughly to dry.

Replacing the Lid and Gaskets:

We take care in only using materials that are safe and hygienic for food contact. However, if plastic parts become damaged or their surface becomes rough, please replace them for optimum performance. The Lid and other consumable parts may need to be re