


Name of Each Part

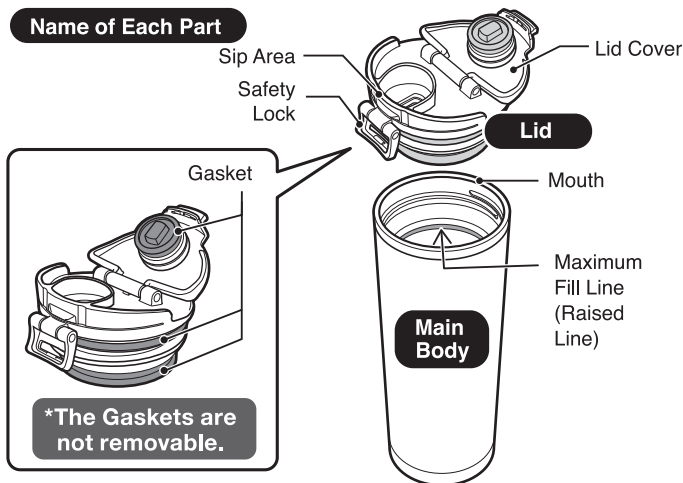

- The illustrations used in this instruction manual may differ from the actual product you have purchased.
- Please read these instructions before use, and keep for future reference.

Warning

- Please follow these instructions to prevent injury, scalding, accidents, malfunction or performance deterioration of the product, spilling of beverages, etc.

Do not fill the Main Body above the Maximum Fill Line (Raised Line).



When containing hot beverages:

- Drink slowly without tilting the product suddenly.
- Do not shake the product forcefully.
- Do not open the Lid Cover forcefully. Also, hold the Lid Cover securely when opening it. Never open the Lid Cover when it is tilted or near your face.
- The pressure inside the product may rise, making it difficult to remove the Lid. If that happens, open the Lid Cover once, and remove the Lid.

— 1 —

SX-K-1E (E) / A

Do not use if water enters the interior of the Vacuum Layer.

If the internal water seeps out from the Vacuum Layer, drinking it may cause illness.



Do not hold the product by the Lid, Safety Lock, or Lid Cover when carrying it. The product may fall and cause injuries.

Make sure that there is no beverage leakage before using the product.

Do not allow infants or small children to use this product. Keep out of the reach of infants and small children.

Do not attach parts other than those specifically designed for this product.

Do not use the product if its thermal insulation performance has deteriorated.

Do not disassemble the product.

Do not heat in a microwave, as doing so may cause sparks.

Do not place near open flames (from gas stoves, etc.), on top of electric heaters, or IH cooking devices, as doing so may cause a fire or malfunction.

When pouring hot beverages into the Main Body, be careful not to let it tip over.

When a vehicle drink holder is available:

- Make sure that the product sits securely inside the drink holder.
- Do not use a hanging-type drink holder that attaches to the window or air vent.

Consume beverages within the same day.

Spoiled beverages may produce gas, raising the pressure inside the product and causing the Lid to burst.

Never fill the product with the following:

- Dry ice or carbonated drinks
- Liquids high in sodium such as soup or Kobu-cha
- Dairy products or fruit juice
- Fruit pulp or tea leaves

Do not use this product for other than storing and keeping beverages hot or cold.

Note: The rattling noise that may be heard when the Main Body is shaken comes from the metallic foil used in the vacuum insulation to increase heat (cold) retention, and does not indicate a malfunction.

Avoid dropping or hitting against hard surfaces.

Do not place in the freezer.

Do not pierce the Tumbler with ice picks or other sharp objects.

Do not place cans or bottles inside the Main Body.

Never remove the sticker on the bottom of the Main Body.



Thoroughly clean the inside and outside of the Main Body (mouth) and Lid after every use. Be particularly careful after filling the product with sports drinks.

Do not fill the product with the Lid attached, as it may overflow.

Do not place near heat sources such as gas stoves, ovens, and heaters, as doing so may cause deformation or discoloration of the product.

Break ice cubes into smaller pieces, as failure to do so may cause deformation of the Main Body and leakage.

When placing the product in a bag, close the Safety Lock and position the product vertically to prevent leakage or condensation.

This product is designed to be drunk directly, so the beverage may splash if it is used for pouring.

Do not scratch or rub the design on the outside of the Main Body strongly using fingernails or hard objects, as this may cause the design to come off.


— 2 —

How to Use:

- Follow the instructions for care and wash the product thoroughly before use.
- When you first use the product, there may be a plastic smell. However, this will become less noticeable with use.
- The stainless steel body of the Tumbler may give off a metallic odor, however this is a normal property of stainless steel.
- Do not attach or remove the Lid when the Lid Cover or Safety Lock is open or by holding the Safety Lock.

1 Open the Safety Lock.

Open the Safety Lock in the direction of the arrow.

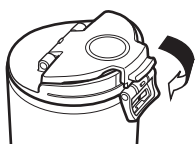

2 Open the Lid Cover and drink the beverage.

Hold the Lid Cover by the Tab and open it all the way in the direction of the arrow. Then, drink the beverage.

- Do not open or close the Lid Cover forcefully.

*The Lid Cover closes tightly to prevent it from opening when tipped over. Hold the Main Body securely when opening the Lid Cover.



3 Close the Lid Cover and the Safety Lock.

- Do not leave the Tumbler with the Lid Cover open.
- After you are done drinking, always close the Lid Cover with the product in an upright position and close the Safety Lock securely.



— 3 —

How to Take Care of Your product:

- Clean the product after each use to prevent odors and mold, and to keep the product sanitary.

When Cleaning Your Product:

- Do not boil or use a dishwasher or dish-dryer.
- Do not clean using paint thinner, polishing powders, abrasive cleansers, scrub brushes (nylon, metal wire, etc.), melamine sponges, the nylon side of an abrasive sponge, or any similar items.
- Do not use bleach as it may damage the product.
- Zojirushi's designated cleaning detergent SB-ZA01/SB-ZA01E may be used to clean the interior of the Main Body and Lid.
- The Main Body is fully washable, but do not soak it in water for an extended period of time.
- If the product is not going to be used for an extended period, wash thoroughly and dry well. Store the product away from high temperatures and humidity.

Regular Care

- ① Using warm water and mild dishwashing liquid, wash the Lid and the outside of the Main Body with a sponge, and the inside of the Main Body with a soft sponge with a handle. Use a small brush if necessary.
- ② Rinse, wipe away remaining water, and leave to dry thoroughly.
- ③ Place the Lid as illustrated with the Lid Cover open and let it dry thoroughly.



- Streaks or smudges caused by rubbing on the coated portion of the Main Body can be removed using a soft eraser.

Dealing with Stubborn Dirt

Rust Spots and Water Stains

- ① Fill the Main Body with hot water with 10% vinegar without attaching the Lid.
- ② After 30 minutes to an hour, wash the interior thoroughly.

Tea and Coffee Stains

Remove the Lid and use Zojirushi's cleaning detergent SB-ZA01/SB-ZA01E. (Contact Zojirushi Customer Service or your local dealer for further information.)

Replacing the Lid:

We take care in only using materials that are safe and hygienic for food contact. However, if plastic parts become damaged or their surface becomes rough, please replace them for optimum performance. The Lid may need to be replaced due to time and wear. Please check them about once a year. When replacing parts, please record the model number and part name beforehand. Then contact either the store where you purchased the product or Zojirushi Customer Service. Replacement parts may be available for an additional charge.

— 4 —