


Thank you for your purchase of this quality Zojirushi product. We are confident that it will give you top performance and optimum satisfaction for many years. To ensure this, please read and follow the important guidelines below.


**Name of Each Part:**

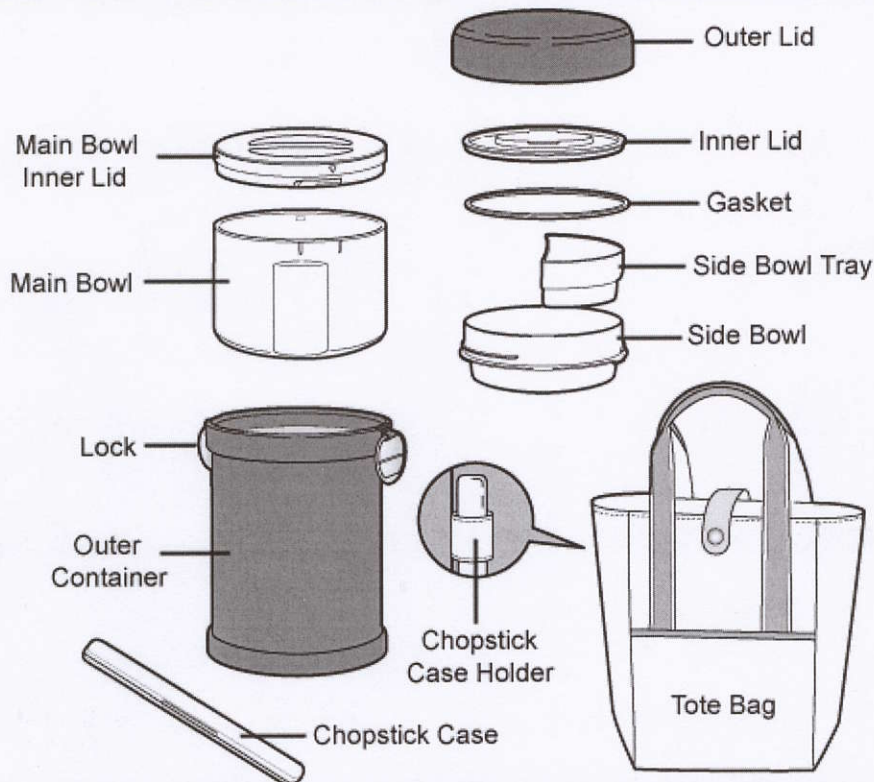

**How to Use:**


**1. Remove inner bowls**

Unlock the sides, remove outer lid, and take out inner bowls from outer container.

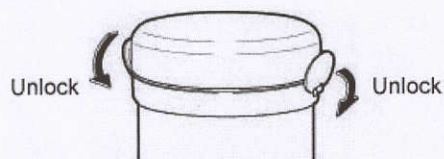

**2. Preheat**


- For maximum heat retention, fill outer container and inner bowls with hot water for 1-2 minutes.
- After preheating, discard the hot water and wipe with a soft cloth.

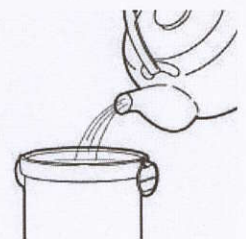

**3. Fill main bowl**


Fill the main bowl with hot rice, close the inner lid and place in the outer container.

\*When closing inner lid, make sure the triangle mark on the lid aligns with the tab mark.

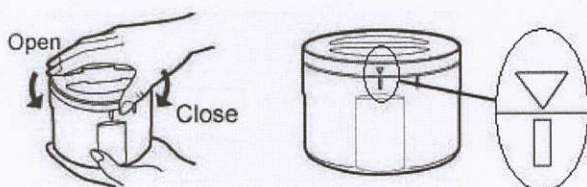


**4. Fill the side bowl**

Fill the side bowl and place the inner lid on top. Fit the outer lid and place in the outer container.

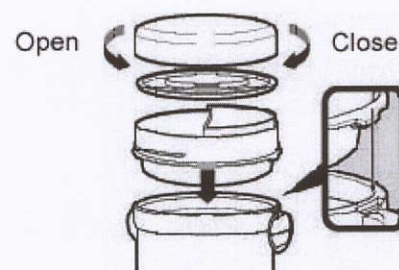

### 5. Lock the lid on the outer container and place in tote bag

\*Place the chopstick case holder in the inside slot of the tote bag.

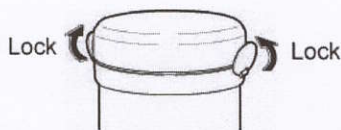

Product Name	Ms. Bento Stainless Lunch Jar
Model No.	SL-MB07
Capacity	Main Bowl 11.2 oz. Side Bowl 10.5 oz.

### How to Remove/Place the Gasket:


#### Gasket

- To Remove: Push the gasket off with your fingers.
- To Place: Fit the gasket around the rim of the inner lid so that the opening in the gasket faces out.

a



b

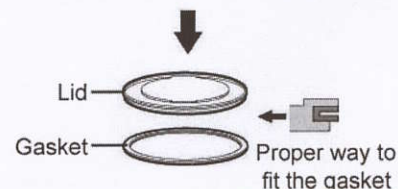

### Caution:

- Keep out of reach from infants.
- Keep away from heat sources such as gas stoves, ovens and heaters.
- When placing inner bowls in the microwave, please:
  - Remove all lids from inner bowls.
  - Do not microwave outer container.
  - Do not microwave the inner bowls when there is nothing inside.
- Do not leave the lunch jar on its side (contents may spill).
- Do not leave food in lunch jar for a long period of time for it may spoil. Do not include foods that spoil easily such as dairy products.
- Please avoid storing liquids in the main bowl for it may spill.
- Do not place any food directly in the outer container.
- Clean the inside of the outer container to avoid rusting.
- Do not carry by the lid.
- Avoid dropping or hitting against hard surfaces.
- Consume foods within 6 hours to keep foods from spoiling.

### How to Take Care of your Lunch Jar:

Outer Lid Inner Bowls Chopstick Case Chopsticks	Wash with warm water and dishwashing soap, rinse and dry. <ul style="list-style-type: none"> <li>Remove and wash the gasket and valve after each use.</li> <li>Remember to replace the gasket and valve packing after washing.</li> <li>Remove lid while drying.</li> </ul>
Outer Container Inner Lid	Wash with warm water and dishwashing soap, rinse and dry with a soft cloth. <ul style="list-style-type: none"> <li>Do not soak.</li> </ul>
Tote Bag	Wipe with a damp cloth with warm water and dishwashing soap.

### For Odor Problems:

If the jar is kept unwashed for a long period of time or is not cleaned thoroughly, the inner bowls may smell or discolor. In this case, please follow these instructions.

Outer Container Inner Bowls	Wash thoroughly and dry with a soft cloth. Place in the sun and let dry for 1-2 hours.
--------------------------------	--

- Do not soak.
- Do not place in dishwashers or dryers.
- Do not clean with thinner, benzene, bleach, abrasive cleaners or other harsh cleaners.
- Do not bleach.

For Questions or Comments, please contact:

Zojirushi America Corporation

6259 Bandini Blvd., Commerce, CA 90040-3113

Tel: (800) 733-6270 / (323) 722-1700 / Fax: (323) 722-0077

www.zojirushi.com



**ZOJIRUSHI**